# LC75843UGA LCD Driver IC Evaluation Board User's Manual

### ON Semiconductor®

http://onsemi.com

### **EVAL BOARD USER'S MANUAL**

#### Overview

The LC75843UGAGEVB is an evaluation board for operation check of 1/1 to 1/4 duty general-purpose LCD driver IC (LC75843UGA). This evaluation board has a power supply circuit, a controller circuit, an LCD driver IC circuit, an LCD panel circuit, an LED circuit. Therefore, this evaluation board can facilitate the operation check (state setting and waveform monitor, etc.) of the LCD driver IC. In addition, this evaluation board can automatically demonstrate.

#### **Features**

- This Evaluation Board is Equipped with a Controller, and the Control of the LCD Driver IC is Possible by Serial Communication (CCB\* Format)
- The 1/4 Duty LCD Panel is Implemented
- Capable of the LED Control by the General-purpose Port of the LCD Driver IC (Capable of the LED Brightness Adjustment by the PWM Control)

- Capable of Waveform Monitor of All Common Outputs, All Segment Outputs and All General-purpose Port Outputs
- This Evaluation Board can Separate the Signal between Each Circuit Block. Therefore the External Input to an LCD Driver IC is Possible
- This Evaluation Board has the Demonstration Mode which Automatically Performs LCD Display and LED Control by Controller Control
- This Evaluation Board is Pb-free and RoHS Compliant

\*CCB® is ON Semiconductor's original format. All addresses are managed by ON Semiconductor for this format.

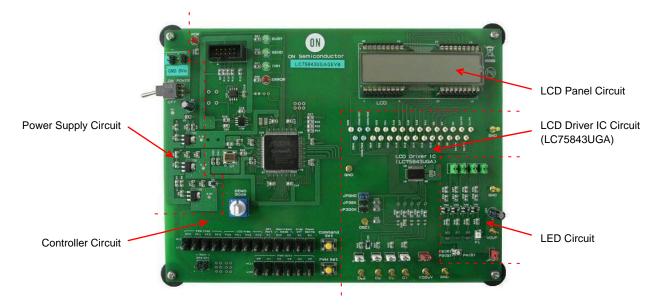


Figure 1. Appearance of LCD Driver IC Evaluation Board (LC75843UGAGEVB)

### **SPECIFICATIONS**

**Table 1. RECOMMENDED OPERATING CONDITIONS** 

			'	/alue/Rating	ıs	
Parameter	Symbol	Conditions	Min	Тур	Max	Unit
Specifications of LO	CD Driver IC	Evaluation Board (LC75843UGAGEVB)				
Main Power Supply Voltage	9Vin		7.0	9.0	12.0	V
Pull-up Power Supply Voltage for LED	VOUP	When the jump socket of the JPUP is removed and an external power supply is inputted from VOUP pin.	4.5	5.0	6.3	V
Main Power Supply Current	I <sub>DD9V</sub>	9Vin = 9.0 V, When the switch of the P1 is set to H(1) and moving the "All ON test (DEMO mode = "1")" mode.  (This condition is a maximum current flow)	-	125	-	mA
Board Size			200 mm	 × 150 mm, t	= 1.6 mm	
Board Material				poxy (FR4), opper Foil 35		
Specifications of LO	CD Driver IC	C (LC75843UGA)				
Power Supply Voltage	V <sub>DD</sub>	When the jump socket of the JP5V is removed and an external power supply is inputted from VDD5V pin.	4.5	_	6.3	V
Input High Level Voltage	V <sub>IH1</sub>	When the jump sockets of the JPINH, JPCE, JPCL and JPDI are removed and an external signal is inputted from CE, CL, DI and INH pins.	0.4 V <sub>DD</sub>	-	6.3	V
	V <sub>IH2</sub>	When the jump sockets of the JPGND, JP38K and JP300K are removed and an external clock is inputted from OSCI pin.	0.4 V <sub>DD</sub>	-	6.3	V
Input Low Level Voltage	V <sub>IL1</sub>	When the jump sockets of the JPINH, JPCE, JPCL and JPDI are removed and an external signal is inputted from CE, CL, DI and INH pins.	0	-	0.2 V <sub>DD</sub>	V
	V <sub>IL2</sub>	When the jump sockets of the JPGND, JP38K and JP300K are removed and an external clock is inputted from OSCI pin.	0	-	0.2 V <sub>DD</sub>	V
CCB Serial Clock Operating Frequency	f <sub>CL</sub>	When the jump socket of the JPCL is removed and an external signal is inputted from CL pin.	_	-	3.125	MHz
External Clock Operating Frequency	f <sub>CK</sub>	When the jump sockets of the JPGND, JP38K and JP300K are removed and an external clock is inputted from OSCI pin.	10	300	600	kHz
External Clock Duty Cycle	D <sub>CK</sub>	When the jump sockets of the JPGND, JP38K and JP300K are removed and an external clock is inputted from OSCI pin.	30	50	70	%

Functional operation above the stresses listed in the Recommended Operating Ranges is not implied. Extended exposure to stresses beyond the Recommended Operating Ranges limits may affect device reliability.

NOTE: We have a case to change these specifications without a notice for improvement.

#### **BLOCK DIAGRAM**

The following figure shows the block diagram of the LC75843UGAGEVB.

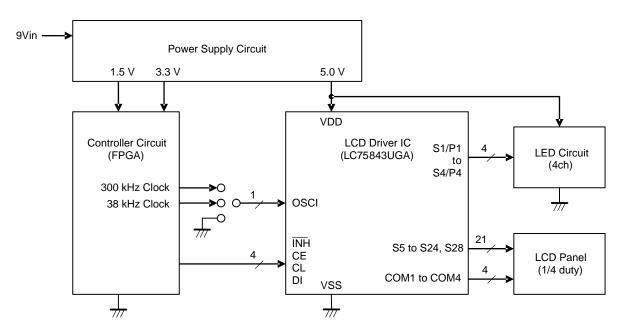


Figure 2. Block Diagram of LCD Driver IC Evaluation Board (LC75843UGAGEVB)

#### **TEST PROCEDURE**

#### When the All Circuits in the LC75843UGAGEVB Board Are Used

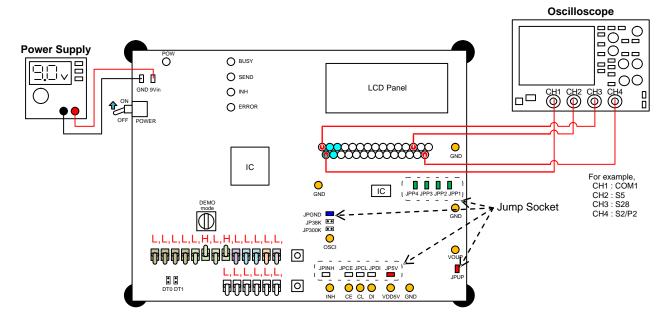


Figure 3. The Test Constitution when the All Circuits in the LC75843UGAGEVB Board Are Used

- 1. Connect the test setup as shown in Figure 3.
- Insert the jump sockets of the JP5V, JPGND, JPINH, JPCE, JPCL, JPDI, JPUP, JPP1, JPP2, JPP3 and JPP4, and remove the jump sockets of the DT0, DT1, JP38K and JP300K.
- 3. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position. (The red LED monitor of the "POW" is turned on)
- 4. An automatic demonstration mode is selected by moving "DEMO mode" switch to the "9" position.
- 5. Set the following switches. About the setting contents details of the switch, refer to "Explanation of the Switches of Setting the Control Data".

Switches	Functions	Contents Which Are Set
PF0 to PF3	PWM output waveform frame frequency select.	The PWM output waveform frame frequency is 195 [Hz] by moving "PF0, PF1, PF2, PF3" switch to the "L(0), L(0), L(0), L(0)" position.
FC0 to FC3	Common/Segment output waveform frame frequency select.	The common/segment output waveform frame frequency is 97 [Hz] by moving "FC0, FC1, FC2, FC3" switch to the "L(0), H(1), L(0), H(1)" position.
P1	General-purpose output port (S1/P1) function select.	L(0) : Low level output mode
EXF	External clock operating frequency mode select at OC = H(1).	L(0): 300 kHz input operating mode
OC	Fundamental clock operating mode select.	L(0): Internal oscillator clock operating mode
SC	Display on/off select.	L(0) : Normal display mode
BU	Power saving mode select.	L(0) : Normal mode
W0 to W5	PWM output waveform duty select.	When switch of the "DEMO mode" is set to "9", duty of the PWM output waveform is automatically set, therefore switches of the "W0 to W5" are set to "L(0), L(0), L(0), L(0), L(0), position.

- 6. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the "Command Set" switch. (The green LED monitor of the "BUSY" and "INH" are turned on)
- 7. The customer can confirm the movement of the LCD display and LED brightness adjustment by the automatic demonstration. Then, the customer can confirm the waveform of the common outputs (COM1 to COM4), segment outputs (S5 to S24, S28) and general-purpose port outputs (P1 to P4).


For example, when the DEMO mode is "9"

- The green LED monitor of the "SEND" flashes quickly.
- The customer can confirm that a "AUTO" characters and a PWM duty value are displayed to LCD.





to



• The customer can confirm that LEDs from P1 to P4 change brightly gradually.



### When the External Power Supply Is Used

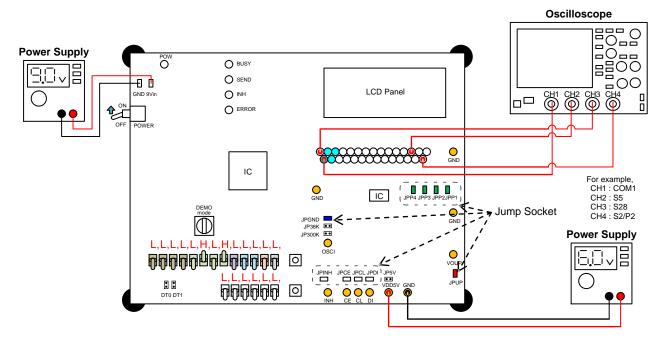


Figure 4. The Test Constitution when the External Power Supply Is Used

- 1. Connect the test setup as shown in Figure 4.
- Insert the jump sockets of the JPGND, JPINH, JPCE, JPCL, JPDI, JPUP, JPP1, JPP2, JPP3 and JPP4, and remove the jump sockets of the DT0, DT1, JP38K, JP300K and JP5V.
- 3. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position. (The red LED monitor of the "POW" is turned on)
- 4. Supply the voltage of the external power supply to "VDD5V" pin. The following specification shows the allowable operating ranges of LC75843UGA.

Parameter	Symbol	Min	Тур	Max	Unit
Power Supply Voltage for LC75843UGA	$V_{DD}$	4.5	-	6.3	V

- 5. An automatic demonstration mode is selected by moving "DEMO mode" switch to the "9" position.
- 6. Set the following switches. About the setting contents details of the switch, refer to
- "Explanation of the Switches of Setting the Control Data".

Switches	Functions	Contents Which Are Set
PF0 to PF3	PWM output waveform frame frequency select.	The PWM output waveform frame frequency is 195 [Hz] by moving "PF0, PF1, PF2, PF3" switch to the "L(0), L(0), L(0), L(0)" position.
FC0 to FC3	Common/Segment output waveform frame frequency select.	The common/segment output waveform frame frequency is 97 [Hz] by moving "FC0, FC1, FC2, FC3" switch to the "L(0), H(1), L(0), H(1)" position.
P1	General-purpose output port (S1/P1) function select.	L(0) : Low level output mode
EXF	External clock operating frequency mode select at OC = H(1).	L(0): 300kHz input operating mode
OC	Fundamental clock operating mode select.	L(0) : Internal oscillator clock operating mode
SC	Display on/off select.	L(0) : Normal display mode
BU	Power saving mode select.	L(0) : Normal mode
W0 to W5	PWM output waveform duty select.	When switch of the "DEMO mode" is set to "9", duty of the PWM output waveform is automatically set, therefore switches of the "W0 to W5" are set to "L(0), L(0), L(0), L(0), L(0), L(0)" position.

- 7. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the "Command Set" switch. (The green LED monitor of the "BUSY" and "INH" are turned on)
- 8. The customer can confirm the movement of the LCD display and LED brightness adjustment by

the automatic demonstration. Then, the customer can confirm the waveform of the common outputs (COM1 to COM4), segment outputs (S5 to S24, S28) and general-purpose port outputs (P1 to P4). (The green LED monitor of the "SEND" flashes quickly)

### When the Customer's Original Controller Board Is Used

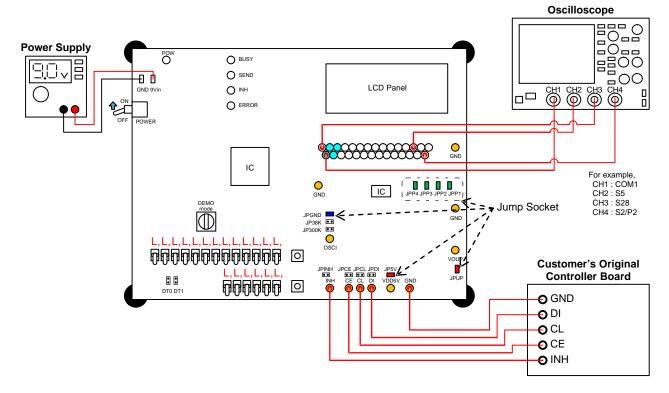


Figure 5. The Test Constitution when the Customer's Original Controller Board Is Used

- 1. Connect the test setup as shown in Figure 5.
- Insert the jump sockets of the JP5V, JPGND, JPUP, JPP1, JPP2, JPP3 and JPP4, and remove the jump sockets of the DT0, DT1, JP38K, JP300K, JPINH, JPCE, JPCL and JPDI.
- The switch does not need to set because the switch on the evaluation board are not used.
- 4. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position. (The red LED monitor of the "POW" is turned on)
- 5. The CCB serial data are transferred from a customer's original controller board to LCD driver IC. The following specification shows the allowable operating ranges of LC75843UGA.

Parameter	Symbol	Min	Тур	Max	Unit
Input High Level Voltage	V <sub>IH1</sub>	0.4 V <sub>DD</sub>	-	6.3	V
Input Low Level Voltage	V <sub>IL1</sub>	0	-	0.2 V <sub>DD</sub>	V
CCB Serial Clock Operating Frequency	f <sub>CL</sub>	-	-	3.125	MHz

Confirm a result of LCD display and the LED display controlled by the customer's original controller board. Then, the customer can confirm the waveform of the common outputs (COM1 to COM4), segment outputs (S5 to S24, S28) and general-purpose port outputs (P1 to P4).

### When the LCD Display Is Driven by the External Clock Input

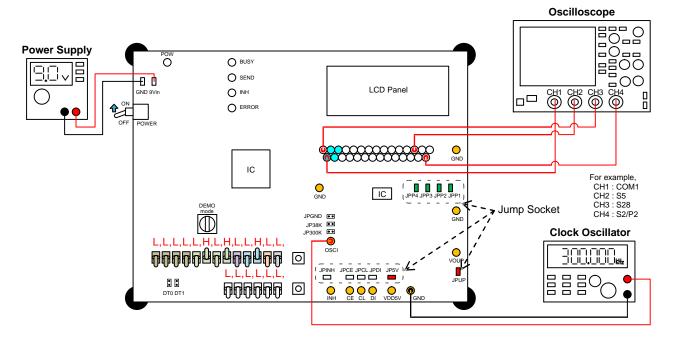


Figure 6. The Test Constitution when the LCD Display Is Driven by the External Clock Input

When the LCD Display Is Driven by the Clock Oscillator

- 1. Connect the test setup as shown in Figure 6.
- Insert the jump sockets of the JP5V, JPINH, JPCE, JPCL, JPDI, JPUP, JPP1, JPP2, JPP3 and JPP4, and remove the jump sockets of the DT0, DT1, JPGND, JP38K and JP300K.
- 3. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON"
- position. (The red LED monitor of the "POW" is turned on)
- 4. An automatic demonstration mode is selected by moving "DEMO mode" switch to the "9" position.
- Set the following switches. About the setting contents details of the switch, refer to "Explanation of the Switches of Setting the Control Data".

Switches	Functions	Contents Which Are Set
PF0 to PF3	PWM output waveform frame frequency select.	The PWM output waveform frame frequency is 195 [Hz] by moving "PF0, PF1, PF2, PF3" switch to the "L(0), L(0), L(0), L(0)" position.
FC0 to FC3	Common/Segment output waveform frame frequency select.	The common/segment output waveform frame frequency is 97 [Hz] by moving "FC0, FC1, FC2, FC3" switch to the "L(0), H(1), L(0), H(1)" position.
P1	General-purpose output port (S1/P1) function select.	L(0) : Low level output mode
EXF	External clock operating frequency mode select at OC = H(1).	L(0) : 300kHz input operating mode
OC	Fundamental clock operating mode select.	H(1): External clock operating mode
SC	Display on/off select.	L(0) : Normal display mode
BU	Power saving mode select.	L(0) : Normal mode
W0 to W5	PWM output waveform duty select.	When switch of the "DEMO mode" is set to "9", duty of the PWM output waveform is automatically set, therefore switches of the "W0 to W5" are set to "L(0), L(0), L(0), L(0), L(0), L(0)" position.

Supply the external clock to "OSCI" pin.
 The following specification shows the allowable operating ranges of LC75843UGA.

Parameter	Symbol	Min	Тур	Max	Unit
Input High Level Voltage	V <sub>IH2</sub>	0.4 V <sub>DD</sub>	-	6.3	V
Input Low Level Voltage	V <sub>IL2</sub>	0	-	0.2 V <sub>DD</sub>	V
External Clock Operating Frequency	f <sub>CK</sub>	10	300	600	kHz
External Clock Duty Cycle	D <sub>CK</sub>	30	50	70	%

- 7. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the "Command Set" switch. (The green LED monitor of the "BUSY" and "INH" are turned on)
- 8. The customer can confirm the movement of the LCD display and LED brightness adjustment by the automatic demonstration. Then, the customer can confirm the waveform of the common outputs (COM1 to COM4), segment outputs (S5 to S24, S28) and general-purpose port outputs (P1 to P4).

When the LCD Display Is Driven by the 300 [kHz] External Clock Input

- The LCD display is turned off by pushing the switch of "Command Set" and "PWM Set" at the same time more than two seconds. (The green LED monitor of the "BUSY" and "INH" are turned off)
- Insert the jump socket of the JP300K, and remove the jump sockets of the JPGND and JP38K.
   The 301.205 [MHz] (50 MHz × 166 clock) clock output by the controller is input into an LCD driver IC by inserting a jump socket of the JP300K.
- 3. Move "OC" switch to the "H(1)" position and "EXF" switch to the "L(0)" position.

- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the "Command Set" switch. (The green LED monitor of the "BUSY" and "INH" are turned on)
- 5. The customer can confirm the movement of the LCD display and LED brightness adjustment by the automatic demonstration. Then, the customer can confirm the waveform of the common outputs (COM1 to COM4), segment outputs (S5 to S24, S28) and general-purpose port outputs (P1 to P4).

When the LCD Display Is Driven by the 38 [kHz] External Clock Input

- The LCD display is turned off by pushing the switch of "Command Set" and "PWM Set" at the same time more than two seconds. (The green LED monitor of the "BUSY" and "INH" are turned off)
- Insert the jump socket of the JP38K, and remove the jump sockets of the JPGND and JP300K. The 37.994 [MHz] (50 MHz × 1316 clock) clock output by the controller is input into an LCD driver IC by inserting a jump socket of the JP38K.
- 3. Move "OC" switch to the "H(1)" position and "EXF" switch to the "H(1)" position.

- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the "Command Set" switch. (The green LED monitor of the "BUSY" and "INH" are turned on)
- 5. The customer can confirm the movement of the LCD display and LED brightness adjustment by

the automatic demonstration. Then, the customer can confirm the waveform of the common outputs (COM1 to COM4), segment outputs (S5 to S24, S28) and general-purpose port outputs (P1 to P4).

### When the LCD Display Is Driven Using the LCD Driver IC in All Customer Original Environment


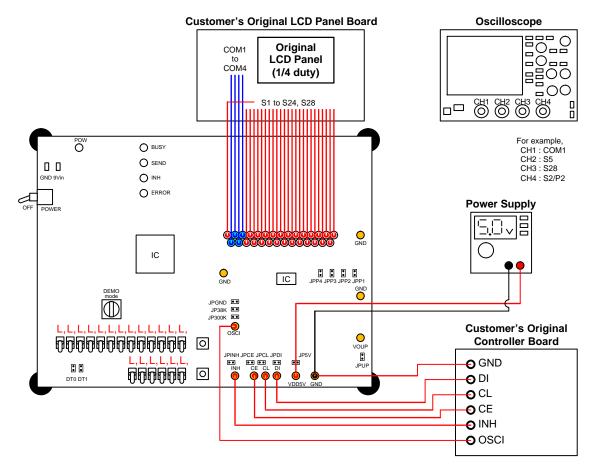


Figure 7. The Test Constitution when the LCD Display Is Driven Using the LCD Driver IC in All Customer Original Environment.

When the Customer's Original LCD Panel of the 1/4 Duty Is Used

When a customer uses the "Customer's original LCD panel", because the segment allotments of the LCD panel are different the control by the "Customer's original controller board" is necessary. When 1/4 duty drive mode, LC75843UGA can drive the LCD up to 100 segments.

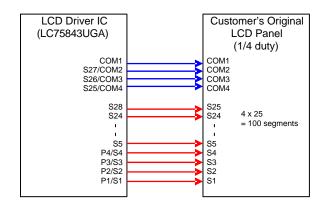

- 1. Connect the test setup shown in Figure 7.
- Remove the all jump sockets of the JP5V, JPGND, JP38K, JP300K, DT0, DT1, JPINH, JPCE, JPCL, JPDI, JPUP, JPP1, JPP2, JPP3 and JPP4. However, when the controller circuit in the evaluation board is used, remove the jump sockets of the DT0 and
- DT1. The switch does not need to set because the switch on the evaluation board are not used.
- 3. Supply the voltage of the external power supply to "VDD5V" pin.

The following specification shows the allowable operating ranges of LC75843UGA.

Parameter	Symbol	Min	Тур	Max	Unit
Power Supply Voltage for LC75843UGA	$V_{DD}$	4.5	-	6.3	V

4. Supply the external clock to "OSCI" pin, and the CCB serial data are transferred from a customer's original controller board to LCD driver IC.


The following specification shows the allowable operating ranges of LC75843UGA.

Parameter	Symbol	Min	Тур	Max	Unit
Input High Level Voltage	V <sub>IH1</sub>	0.4 V <sub>DD</sub>	-	6.3	V
Input High Level Voltage	V <sub>IH2</sub>	0.4 V <sub>DD</sub>	-	6.3	V
Input Low Level Voltage	V <sub>IL1</sub>	0	-	0.2 V <sub>DD</sub>	V
Input Low Level Voltage	V <sub>IL2</sub>	0	_	0.2 V <sub>DD</sub>	V
CCB Serial Clock Operating Frequency	f <sub>CL</sub>	-	_	3.125	MHz
External Clock Operating Frequency	f <sub>CK</sub>	10	300	600	kHz
External Clock Duty Cycle	D <sub>CK</sub>	30	50	70	%

5. Confirm a result of LCD display and the LED display controlled by the customer's original controller board. Then, the customer can confirm the waveform of the common outputs (COM1 to COM4), segment outputs (S5 to S24, S28) and general-purpose port and segment outputs (S1/P1 to S4/P4).

When the Customer's Original LCD Panel of the 1/3 Duty Is Used

When a customer uses the "Customer's original LCD panel", because the segment allotments of the LCD panel are different the control by the "Customer's original controller board" is necessary. When 1/3 duty drive mode, LC75843UGA can drive the LCD up to 78 segments.

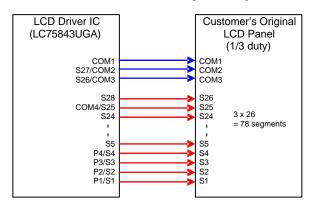


- 1. Connect the test setup shown in Figure 7. However, an LCD panel of the 1/3 duty is used.
- Remove the all jump sockets (JP5V, JPGND, JP38K, JP300K, DT0, DT1, JPINH, JPCE, JPCL,

JPDI, JPUP and JPP1 to JPP4). However, when the controller circuit in the evaluation board is used, insert the "DT0" jump socket and remove the "DT1" jump socket. The switch does not need to set because the switch on the evaluation board are not used.

When the Customer's Original LCD Panel of the 1/2 Duty Is Used

When a customer uses the "Customer's original LCD panel", because the segment allotments of the LCD panel are different the control by the "Customer's original controller board" is necessary. When 1/2 duty drive mode, LC75843UGA can drive the LCD up to 54 segments.

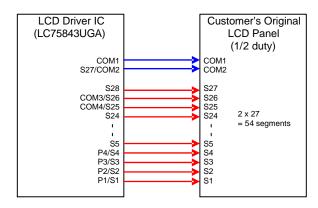


- 1. Connect the test setup shown in Figure 7. However, an LCD panel of the 1/2 duty is used.
- 2. Remove the all jump sockets of the JP5V, JPGND, JP38K, JP300K, DT0, DT1, JPINH, JPCE, JPCL, JPDI, JPUP, JPP1, JPP2, JPP3 and JPP4. However,

when the controller circuit in the evaluation board is used, insert the jump socket of the DT1 and remove the jump socket of the DT0. The switch does not need to set because the switch on the evaluation board are not used.

When the Customer's Original LCD Panel of the Static (1/1 Duty) Is Used

When a customer uses the "Customer's original LCD panel", because the segment allotments of the LCD panel are different the control by the "Customer's original controller board" is necessary. When static (1/1 duty) drive mode, LC75843UGA can drive the LCD up to 28 segments.

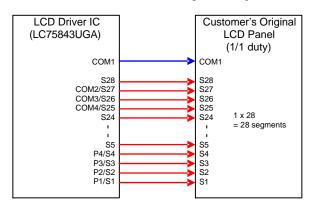

- 1. Connect the test setup shown in Figure 7.

  However, an LCD panel of the static (1/1 duty) is used
- 2. Remove the all jump sockets of the JP5V, JPGND, JP38K, JP300K, DT0, DT1, JPINH, JPCE, JPCL, JPDI, JPUP, JPP1, JPP2, JPP3 and JPP4. However, when the controller circuit in the evaluation board is used, insert the jump sockets of the DT0 and DT1. The switch does not need to set because the switch on the evaluation board are not used.

### **SCHEMATIC**

### **Power Supply Circuit**

The power supply circuit of this evaluation board generates three kinds of voltage by a linear regulator IC (LM317) from the power supply voltage of 9 V inputted. The +1.5 V power supply circuit is a power supply for FPGA core, the +3.3 V power supply circuit is a power supply for FPGA I/O and peripheral IC circuits, and the +5.0 V power supply circuit is a power supply for LCD driver IC. The linear regulator IC (LM317) can adjust the output voltage from 1.2 V to 37 V by an external resistor.

The calculating formula of the output voltage:  $VOUT = 1.25 \times (1 + R2 / R1) + IADJ \times R2 [V]$  For example, +1.5 V Power Supply Circuit: VOUT1 =  $1.25 \times (1 + 51 / 240) + 50 \mu A \times 51 = 1.518 \text{ V}$ +3.3 V Power Supply Circuit: VOUT2 =  $1.25 \times (1 + 390 / 240) + 50 \mu A \times 390 = 3.301 \text{ V}$ +5.0 V Power Supply Circuit: VOUT3 =  $1.25 \times (1 + (360 + 620) / 330) + 50 \mu A \times (360 + 620) = 5.011 \text{ V}$ 

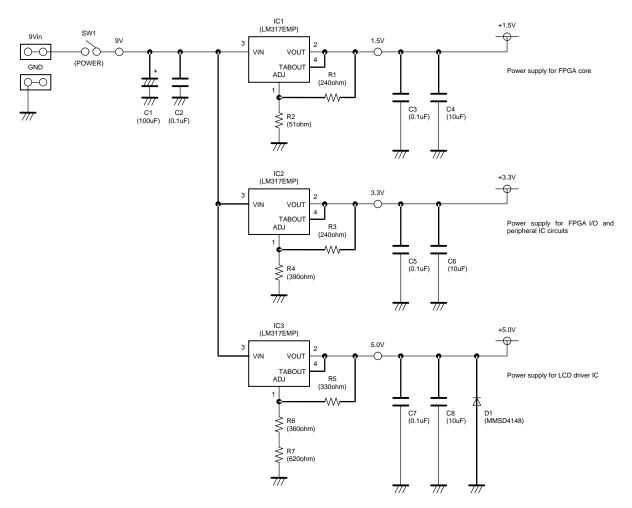


Figure 8. Schematic of Power Supply Circuit


#### **Controller Circuit**

The controller circuit of this evaluation board controls LCD driver IC (LC75843UGA) by CCB format serial data (3 V interface) using FPGA. The crystal oscillator circuit (50 [MHz]), power-on reset circuit, configuration ROM circuit, connector for configuration, switch for condition setting, LED monitor circuit and LCD driver IC interface are connected to FPGA.

The LCD driver IC (LC75843UGA) has various control data for condition setting. Serial data are transferred when push SW4 (Command Set) after having set toggle switches


from SW5 to SW23. In addition, PWM data from SW18 to SW23 are set by pushing SW3 (PWM Set) depending on a demonstration mode. Furthermore, the LCD display data for various display and the general-purpose port data for LED control are generated by a demonstration mode chosen by SW2 (DEMO mode). The internal pull-up resistor function of the input pins of FPGA are set to active.

The customer can confirm the operating conditions of the internal circuit of an FPGA by an LED monitor (POW, BUSY, SEND, INH, ERROR).

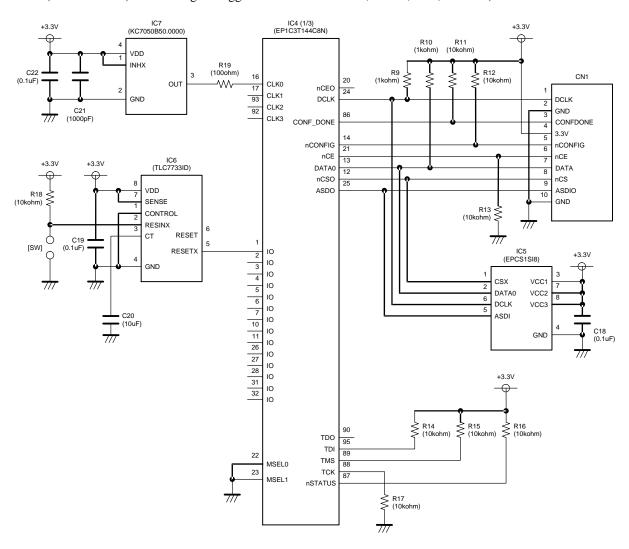

NOTE: The part with a square bracket is not implemented on a board. ([SW])

Figure 9. Schematic of Controller Circuit (1/2)

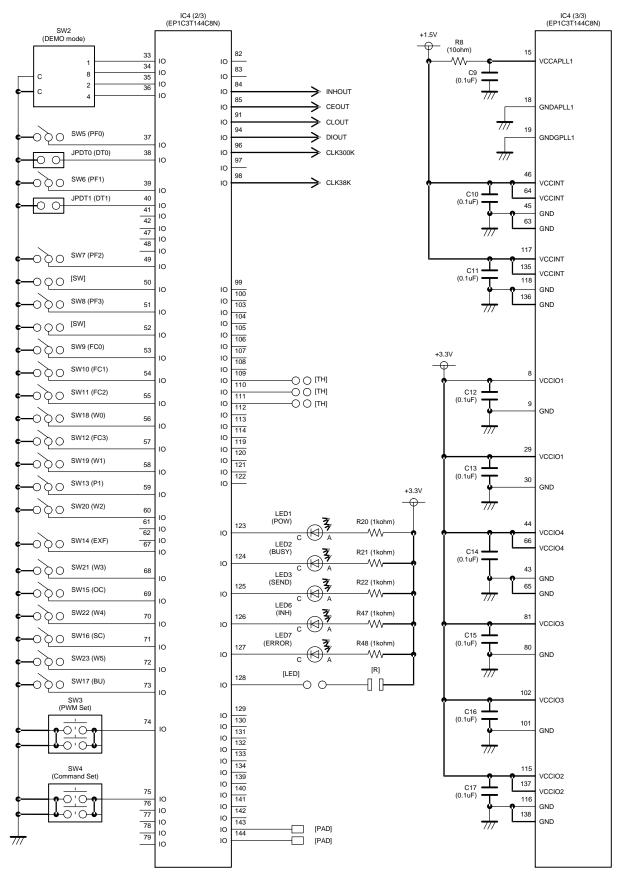

NOTE: The part with a square bracket is not implemented on a board. ([SW], [LED], [R], [TH], [PAD])

Figure 10. Schematic of Controller Circuit (2/2)


#### **LCD Driver IC Circuit**

The LCD driver circuit of this evaluation board uses LC75843UGA. The power supply and the control signal supplied from the controller circuit can separate it by removing a jump socket. Thereby, the customer can supply a power supply and a control signal from the external.

The power supply of the LCD driver IC is supplied +5 V voltage by the power supply circuit of this evaluation board. When customer evaluate the voltage other than +5 V, remove the jump socket of the JP5V, and supply power supply to "VDD5V" pin. Insert only one jump socket in a socket pin of the JPGND, JP38K or JP300K for OSCI

signal by setting of control data of the LCD driver IC. When OC is set to L(0), insert the jump socket of the JPGND. When OC is set to H(1) and EXF is set to L(0), insert the jump socket of the JP300K. When OC is set to H(1) and EXF is set to H(1), insert the jump socket of the JP38K.

The resistors from R23 to R29 are the dumping resistance for waveform shaping. In addition, when waveform shaping is more necessary, connect a condenser (for example, from 100 to 1000 pF) to [C]. The resistors from R30 to R34 are pull-down resistor to protect a circuit when a jump socket was removed.

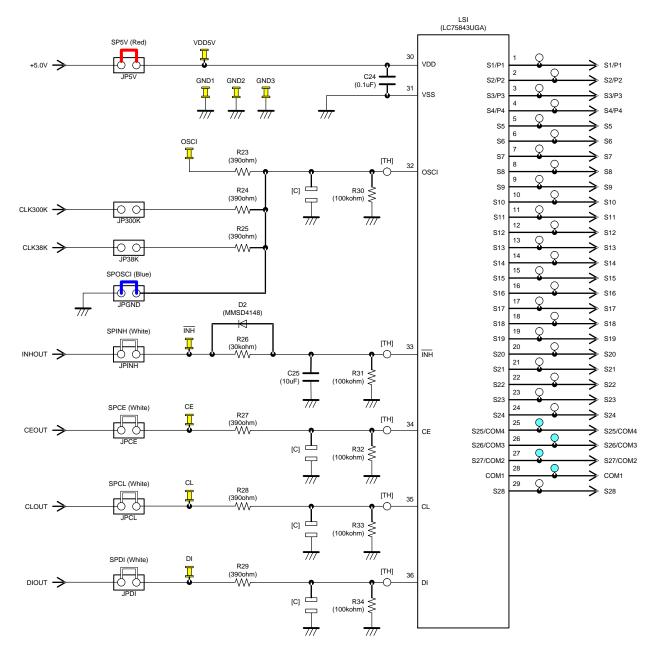

NOTE: The part with a square bracket is not implemented on a board. ([C], [TH])

Figure 11. Schematic of LCD Driver IC Circuit

### **LCD Panel Circuit**

The LCD panel circuit of this evaluation board uses a socket pin, and LCD panel made in varitronix is inserted there. The specifications of the LCD panel are four common pins, 32 segment pins, twisted nematic (TN) type, reflection type, alphanumeric character display and  $70.00 \text{ mm} \times 2.00 \text{ mm} \times 2.80 \text{ mm}$ .

Four common output signals and 21 segment output signals of the LCD driver IC are connected to an LCD panel.

Because S28 output is connected to twelve segments of the LCD panel, the customer can confirm the waveform of big load. About the segment allotment of the LCD panel, refer to "LCD Panel Segment Allotment".

When customer evaluate the display system using the customer's original LCD panel, remove an inserted LCD panel, and connect a customer's original LCD panel.

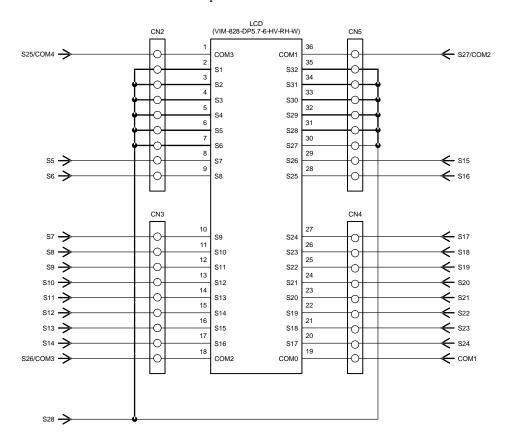


Figure 12. Schematic of LCD Panel Circuit

#### **LED Circuit**

The LED circuit of this evaluation board uses a single color LED and three color (RGB) LED. The LED is controlled by the general-purpose port output of LCD driver IC (LC75843UGA). The general-purpose port output has up to four, and brightness adjustment (64 steps) is possible by PWM output function of up to 3-channel.

The pull-up power supply of the LED is supplied +5 V voltage by the power supply circuit of this evaluation board. When customer evaluate the voltage other than +5 V, remove the jump socket of the JPUP, and supply pull-up power supply to "VOUP" pin.

When customer uses general-purpose port outputs (S1/P1 to S4/P4) of LCD driver IC (LC75843UGA) as a segment


output, remove the jump sockets from JPP1 to JPP4. The resistors from R35 to R38 are pull-down resistor to protect a circuit when a jump socket was removed.

The calculating formula of the LED current:

$$IF = (VOUP - VF - Vsat) / R [A]$$

For example,

LED5 (P1): IF1 = (5 - 1.9 - 0.1) / 200 = 15.0 mALED4 (P2(R)): IF2 = (5 - 2.0 - 0.1) / 200 = 14.5 mALED4 (P3(G)): IF3 = (5 - 3.5 - 0.1) / 91 = 15.4 mALED4 (P4(B)): IF4 = (5 - 3.6 - 0.1) / 82 = 15.8 mA

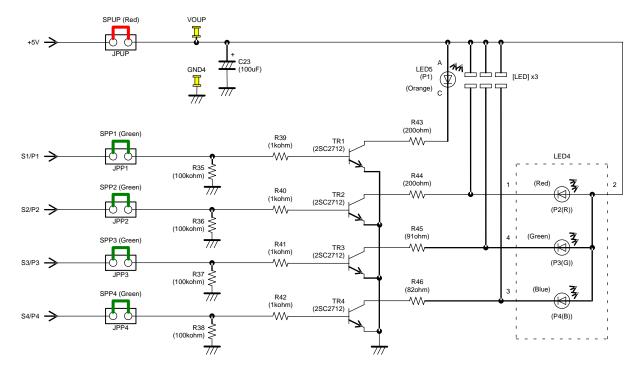

NOTE: The part with a square bracket is not implemented on a board. ([LED])

Figure 13. Schematic of LED Circuit

### **PIN FUNCTIONS**

Table 2. PIN FUNCTIONS OF LC75843UGA EVALUATION BOARD (LC75843UGAGEVB)

Pin Name	Functions	I/O	Control Jump Socket
VDD5V	Power supply pin for LCD driver IC (LC75843UGA).  When supply the power supply voltage from the external, remove the jump socket of the JP5V. When the power supply circuit in the evaluation board is used, the +5.0 [V] voltage is outputted.	I/O	JP5V PP5V
VOUP	Pull-up power supply pin for LED.  When supply the pull-up power supply voltage from the external, remove the jump socket of the JPUP. When the power supply circuit in the evaluation board is used, the +5.0 [V] voltage is outputted.	I/O	JPUP OUP
GND	Ground pin.  Must be connected to ground of all external equipments.	-	GND
OSCI	External clock input pin.  When OC is set to L(0), insert the jump socket of the JPGND.  When OC is set to H(1) and EXF is set to L(0), insert the jump socket of the JP300K.  When OC is set to H(1) and EXF is set to H(1), insert the jump socket of the JP38K.	I/O	JPGND, JP38K, JP300K
ĪNH	Display forced off control input pin.  When input the INH signal from the external, remove the jump socket of the JPINH.	I/O	JPINH DPINH
CE	Chip enable signal input pin of the CCB format.  When input the CE signal from the external, remove the jump socket of the JPCE.	I/O	JPCE JPCE
CL	Synchronization clock signal input pin of the CCB format.  When input the CL signal from the external, remove the jump socket of the JPCL.	I/O	JPCL JPGL
DI	Serial data signal input pin of the CCB format.  When input the DI signal from the external, remove the jump socket of the JPDI.	I/O	JPDI JPDI DI
S1/P1 to S4/P4	Segment outputs or general-purpose port outputs pin.  The pins from S1/P1 to S4/P4 can be used as a general-purpose port output by setting of CCB serial data. When the general-purpose port output is used for a segment function in the evaluation environment of the customer's original, remove the jump sockets from JPP1 to JPP4.	0	JPP1 to JPP4
S5 to S24, S28	Segment output pins.	0	_
COM1	Common output pin.	0	_
COM2/S27, COM3/S26, COM4/S25	Common output or segment output pins.  The pins from COM2/S27 to COM4/S25 can be used as a segment output by setting of CCB serial data.	0	-

### SETTING METHOD OF THE SWITCH

### "DEMO Mode" Rotary Switch



This evaluation board has the demonstration mode which automatically performs LCD display and LED control by

controller control. The customer can select various demonstration contents by the "DEMO mode" rotary switch. The following tables shows the setting contents of the "DEMO mode" rotary switch.

When the jump sockets of the DT0 and DT1 were set for the setting that was not 1/4 duty drive, the "DEMO mode" can use only a mode of "0", "1", "4" and "5". In addition, when "DEMO mode" was set to "2", "3", "6", "7", "8" and "9", the controller is ignored without operating.

Table 3. SETTING CONTENTS OF THE "DEMO MODE" ROTARY SWITCH

"DEMO Mode" Rotary Switch	Demonstration Item	LCD Display Co	ontents	LED Control Contents
0	All OFF Test	All segments are off.	<b>X.X.X.X.X.X.X.</b>	All LED turn off the light.
1	All ON Test	All segments are on.		All LED turn on the light. (100% brightness)
2	LCD Display Test (1)	The LCD displays a "01234".		All LED turn off the light.
3	LCD Display Test (2)	The LCD displays a "AbcdE".		All LED turn off the light.
4	Segment Test	The segment of the LCD displays on in turn.	<b>X.X.X.X.X.X.</b> X.X.	LED does on in turn.
5	Common Test	LCD segment corresponding to same COM are all on.		When COM1 is on, LED turn on the light.
			$X_1X_1X_1X_1X_1X_1X_1X_1$	
6	LED (PWM) Test (1)	The LCD displays a "PWM_1" and a PWM duty value.		Any PWM duty are selected by the switches from W0 to W5. (LED1 to LED3 can set same duty)
7	LED (PWM) Test (2)	The LCD displays a "PWM_2" and a PWM channel number.		Any PWM duty are selected by the switches from W0 to W5. (LED1 to LED3 can set each duty)
8	Demonstration (1)	LCD number display count ups every second.	**************************************	LED does on in turn every second.
9	Demonstration (2)	The LCD displays a "AUTO" and a PWM duty value.	**************************************	PWM duty changes every 100 ms

### Toggle Switch and Push Switch Allotment



The LCD driver IC (LC75843UGA) has various control data for condition setting. Serial data are transferred when push SW4 (Command Set) after having set toggle switches from SW5 (PF0) to SW23 (W5). In addition, PWM data from SW18 (W0) to SW23 (W5) are set by pushing SW3 (PWM Set) depending on a demonstration mode.

Table 4. SETTING CONTENTS OF THE TOGGLE SWITCH

Parts Symbol	Silk Characters	Functions	Control Data of the LCD Driver IC (LC75843UGA)
SW5	PF0	The switches for setting of the PWM output waveform frame	PF0
SW6	PF1	frequency	PF1
SW7	PF2		PF2
SW8	PF3		PF3
SW9	FC0	The switches for setting of the common/segment output	FC0
SW10	FC1	waveform frame frequency	FC1
SW11	FC2		FC2
SW12	FC3		FC3
SW13	P1	The switch for setting of the general-purpose output port (S1/P1) function	D1, PS10, PS11
SW14	EXF	The switch for setting of the external clock operating frequency	EXF
SW15	OC	The switch for setting of the internal oscillator operating mode/external clock operating mode	ОС
SW16	SC	The switch for setting of the on/off state of the segments	SC
SW17	BU	The switch for setting of the normal mode/power-saving mode	BU
SW18 to SW23	W0 to W5	The switches for setting of the PWM data of the PWM output	W0 to W5
JPDT0, JPDT1	DT0, DT1	The sockets for setting of the LCD drive scheme (1/1 to 1/4 duty drive)	DT0, DT1

### **EXPLANATION OF THE SWITCHES OF SETTING THE CONTROL DATA**

The Switches for Setting of the PWM Output Waveform Frame Frequency (PF0 to PF3)

Table 5. EXPLANATION OF THE PF0 TO PF3 TOGGLE SWITCH

	Swit	ches		Internal Oscillator Operating Mode	300 [kHz] External Clock	38 [kHz] External Clock
PF0	PF1	PF2	PF3	(f <sub>osc</sub> = 300 [kHz] typ.) (OC = "L(0)")	Operating Mode (OC = "H(1)", EXF = "L(0)")	Operating Mode (OC = "H(1)", EXF = "H(1)")
L(0)	L(0)	L(0)	L(0)	195 [Hz]	195 [Hz]	
H(1)	L(0)	L(0)	L(0)	213 [Hz]	213 [Hz]	
L(0)	H(1)	L(0)	L(0)	234 [Hz]	234 [Hz]	
H(1)	H(1)	L(0)	L(0)	260 [Hz]	260 [Hz]	
L(0)	L(0)	H(1)	L(0)	293 [Hz]	293 [Hz]	
H(1)	L(0)	H(1)	L(0)	335 [Hz]	335 [Hz]	
L(0)	H(1)	H(1)	L(0)	390 [Hz]	390 [Hz]	When OC = "1" and EXF = "1"
H(1)	H(1)	H(1)	L(0)	469 [Hz]	469 [Hz]	were set to the LCD driver IC, because the LCD driver IC
L(0)	L(0)	L(0)	H(1)	586 [Hz]	586 [Hz]	cannot use PWM output function, this setting is
H(1)	L(0)	L(0)	H(1)	781 [Hz]	781 [Hz]	ignored.
L(0)	H(1)	L(0)	H(1)	1171 [Hz]	1171 [Hz]	
H(1)	H(1)	L(0)	H(1)			
L(0)	L(0)	H(1)	H(1)			
H(1)	L(0)	H(1)	H(1)	335 [Hz]	335 [Hz]	
L(0)	H(1)	H(1)	H(1)			
H(1)	H(1)	H(1)	H(1)			

The Switches for Setting of the Common/Segment Output Waveform Frame Frequency (FC0 to FC3)

Table 6. EXPLANATION OF THE FC0 TO FC3 TOGGLE SWITCH

	Switches			Internal Oscillator Operating Mode	300 [kHz] External Clock	38 [kHz] External Clock
FC0	FC1	FC2	FC3	(f <sub>osc</sub> = 300 [kHz] typ.) (OC = "L(0)")	Operating Mode (OC = "H(1)", EXF = "L(0)")	Operating Mode (OC = "H(1)", EXF = "H(1)")
L(0)	L(0)	L(0)	L(0)	49 [Hz]	49 [Hz]	49 [Hz]
L(0)	L(0)	L(0)	H(1)	56 [Hz]	56 [Hz]	56 [Hz]
L(0)	L(0)	H(1)	L(0)	65 [Hz]	65 [Hz]	66 [Hz]
L(0)	L(0)	H(1)	H(1)	78 [Hz]	78 [Hz]	79 [Hz]
L(0)	H(1)	L(0)	L(0)	87 [Hz]	87 [Hz]	88 [Hz]
L(0)	H(1)	L(0)	H(1)	97 [Hz]	97 [Hz]	99 [Hz]
L(0)	H(1)	H(1)	L(0)	111 [Hz]	111 [Hz]	113 [Hz]
L(0)	H(1)	H(1)	H(1)	130 [Hz]	130 [Hz]	132 [Hz]
H(1)	L(0)	L(0)	L(0)	142 [Hz]	142 [Hz]	144 [Hz]
H(1)	L(0)	L(0)	H(1)	156 [Hz]	156 [Hz]	158 [Hz]
H(1)	L(0)	H(1)	L(0)	173 [Hz]	173 [Hz]	176 [Hz]
H(1)	L(0)	H(1)	H(1)	195 [Hz]	195 [Hz]	198 [Hz]
H(1)	H(1)	L(0)	L(0)	223 [Hz]	223 [Hz]	226 [Hz]
H(1)	H(1)	L(0)	H(1)	260 [Hz]	260 [Hz]	264 [Hz]
H(1)	H(1)	H(1)	L(0)	312 [Hz]	312 [Hz]	316 [Hz]
H(1)	H(1)	H(1)	H(1)	390 [Hz]	390 [Hz]	396 [Hz]

The Switch for Setting of the General-purpose Output Port (S1/P1) Function (P1)

Table 7. EXPLANATION OF THE P1 TOGGLE SWITCH

Switch	Control Data of the LCD Driver IC (LC75843UGA)			
P1	D1	PS10	PS10	Operating Contents
L(0)	0	0	0	The LED(P1) is Turned Off
H(1)	1	0	0	The LED(P1) is Turned On

The Switch for Setting of the Internal Oscillator Operating Mode/External Clock Operating Mode (OC and EXF)

Table 8. EXPLANATION OF THE OC AND EXF TOGGLE SWITCH

Swit	ches		
ОС	EXF	Clock Operating Mode	Control Jump Socket
L(0)	L(0)	Internal Oscillator Operating Mode	Insert the Jump Socket of the JPGND
L(0)	H(1)		
H(1)	L(0)	300 [kHz] External Clock Operating Mode	Insert the Jump Socket of the JP300K
H(1)	H(1)	38 [kHz] External Clock Operating Mode	insert the Jump Socket of the JP38K

The Switch for Setting of the On/Off State of the Segments (SC)

Table 9. EXPLANATION OF THE SC TOGGLE SWITCH

Switch	
SC	Operating Contents
L(0)	Normal Display
H(1)	All Segments are OFF Waveform Drive

The Switch for Setting of the Normal Mode/Power-saving Mode (BU)

Table 10. EXPLANATION OF THE BU TOGGLE SWITCH

Switch	
BU	Operating Contents
L(0)	Normal Mode
H(1)	Power Saving Mode

# The Switches for Setting of the PWM Data of the PWM Output (W0 to W5)

Table 11. EXPLANATION OF THE W0 TO W5 TOGGLE SWITCH

		Swit	ches			
W0	W1	W2	W3	W4	W5	PWM Duty of the General-purpose Port Output
L(0)	L(0)	L(0)	L(0)	L(0)	L(0)	1/64 (1.56%)
H(1)	L(0)	L(0)	L(0)	L(0)	L(0)	2/64 (3.12%)
L(0)	H(1)	L(0)	L(0)	L(0)	L(0)	3/64 (4.69%)
H(1)	H(1)	L(0)	L(0)	L(0)	L(0)	4/64 (6.25%)
L(0)	L(0)	H(1)	L(0)	L(0)	L(0)	5/64 (7.81%)
H(1)	L(0)	H(1)	L(0)	L(0)	L(0)	6/64 (9.38%)
L(0)	H(1)	H(1)	L(0)	L(0)	L(0)	7/64 (10.94%)
H(1)	H(1)	H(1)	L(0)	L(0)	L(0)	8/64 (12.50%)
L(0)	L(0)	L(0)	H(1)	L(0)	L(0)	9/64 (14.06%)
H(1)	L(0)	L(0)	H(1)	L(0)	L(0)	10/64 (15.62%)
L(0)	H(1)	L(0)	H(1)	L(0)	L(0)	11/64 (17.19%)
H(1)	H(1)	L(0)	H(1)	L(0)	L(0)	12/64 (18.75%)
L(0)	L(0)	H(1)	H(1)	L(0)	L(0)	13/64 (20.31%)
H(1)	L(0)	H(1)	H(1)	L(0)	L(0)	14/64 (21.87%)
L(0)	H(1)	H(1)	H(1)	L(0)	L(0)	15/64 (23.44%)
H(1)	H(1)	H(1)	H(1)	L(0)	L(0)	16/64 (25.00%)
L(0)	L(0)	L(0)	L(0)	H(1)	L(0)	17/64 (26.56%)
H(1)	L(0)	L(0)	L(0)	H(1)	L(0)	18/64 (28.12%)
L(0)	H(1)	L(0)	L(0)	H(1)	L(0)	19/64 (29.69%)
H(1)	H(1)	L(0)	L(0)	H(1)	L(0)	20/64 (31.25%)
L(0)	L(0)	H(1)	L(0)	H(1)	L(0)	21/64 (32.81%)
H(1)	L(0)	H(1)	L(0)	H(1)	L(0)	22/64 (34.37%)
L(0)	H(1)	H(1)	L(0)	H(1)	L(0)	23/64 (35.94%)
H(1)	H(1)	H(1)	L(0)	H(1)	L(0)	24/64 (37.50%)
L(0)	L(0)	L(0)	H(1)	H(1)	L(0)	25/64 (39.06%)
H(1)	L(0)	L(0)	H(1)	H(1)	L(0)	26/64 (40.62%)
L(0)	H(1)	L(0)	H(1)	H(1)	L(0)	27/64 (42.19%)
H(1)	H(1)	L(0)	H(1)	H(1)	L(0)	28/64 (43.75%)
L(0)	L(0)	H(1)	H(1)	H(1)	L(0)	29/64 (45.31%)
H(1)	L(0)	H(1)	H(1)	H(1)	L(0)	30/64 (46.87%)
L(0)	H(1)	H(1)	H(1)	H(1)	L(0)	31/64 (48.44%)
H(1)	H(1)	H(1)	H(1)	H(1)	L(0)	32/64 (50.00%)
L(0)	L(0)	L(0)	L(0)	L(0)	H(1)	33/64 (51.56%)
H(1)	L(0)	L(0)	L(0)	L(0)	H(1)	34/64 (53.12%)
L(0)	H(1)	L(0)	L(0)	L(0)	H(1)	35/64 (54.69%)
H(1)	H(1)	L(0)	L(0)	L(0)	H(1)	36/64 (56.25%)
L(0)	L(0)	H(1)	L(0)	L(0)	H(1)	37/64 (57.81%)
H(1)	L(0)	H(1)	L(0)	L(0)	H(1)	38/64 (59.37%)
L(0)	H(1)	H(1)	L(0)	L(0)	H(1)	39/64 (60.94%)
H(1)	H(1)	H(1)	L(0)	L(0)	H(1)	40/64 (62.50%)

Table 11. EXPLANATION OF THE W0 TO W5 TOGGLE SWITCH (continued)

		Swit	ches			
Wo	W1	W2	W3	W4	W5	PWM Duty of the General-purpose Port Output
L(0)	L(0)	L(0)	H(1)	L(0)	H(1)	41/64 (64.06%)
H(1)	L(0)	L(0)	H(1)	L(0)	H(1)	42/64 (65.62%)
L(0)	H(1)	L(0)	H(1)	L(0)	H(1)	43/64 (67.19%)
H(1)	H(1)	L(0)	H(1)	L(0)	H(1)	44/64 (68.75%)
L(0)	L(0)	H(1)	H(1)	L(0)	H(1)	45/64 (70.31%)
H(1)	L(0)	H(1)	H(1)	L(0)	H(1)	46/64 (71.87%)
L(0)	H(1)	H(1)	H(1)	L(0)	H(1)	47/64 (73.44%)
H(1)	H(1)	H(1)	H(1)	L(0)	H(1)	48/64 (75.00%)
L(0)	L(0)	L(0)	L(0)	H(1)	H(1)	49/64 (76.56%)
H(1)	L(0)	L(0)	L(0)	H(1)	H(1)	50/64 (78.12%)
L(0)	H(1)	L(0)	L(0)	H(1)	H(1)	51/64 (79.69%)
H(1)	H(1)	L(0)	L(0)	H(1)	H(1)	52/64 (81.25%)
L(0)	L(0)	H(1)	L(0)	H(1)	H(1)	53/64 (82.81%)
H(1)	L(0)	H(1)	L(0)	H(1)	H(1)	54/64 (84.37%)
L(0)	H(1)	H(1)	L(0)	H(1)	H(1)	55/64 (85.94%)
H(1)	H(1)	H(1)	L(0)	H(1)	H(1)	56/64 (87.50%)
L(0)	L(0)	L(0)	H(1)	H(1)	H(1)	57/64 (89.06%)
H(1)	L(0)	L(0)	H(1)	H(1)	H(1)	58/64 (90.62%)
L(0)	H(1)	L(0)	H(1)	H(1)	H(1)	59/64 (92.19%)
H(1)	H(1)	L(0)	H(1)	H(1)	H(1)	60/64 (93.75%)
L(0)	L(0)	H(1)	H(1)	H(1)	H(1)	61/64 (95.31%)
H(1)	L(0)	H(1)	H(1)	H(1)	H(1)	62/64 (96.87%)
L(0)	H(1)	H(1)	H(1)	H(1)	H(1)	63/64 (98.44%)
H(1)	H(1)	H(1)	H(1)	H(1)	H(1)	64/64 (100.00%)

#### **EXPLANATION OF THE JUMP SOCKETS OF SETTING THE CONTROL DATA**

The Sockets for Setting of the LCD Drive Scheme (1/1 to 1/4 Duty Drive) (DT0 and DT1)



When a customer uses the "Customer's original LCD panel", because the segment allotments of the LCD panel are different the control by the "Customer's original controller board" is necessary.

When the controller circuit in the evaluation board and the 1/4 duty LCD panel are used, remove the jump sockets of the DT0 and DT1.

When the controller circuit in the evaluation board and the 1/3 duty LCD panel are used, insert the jump socket of the DT0 and remove the jump socket of the DT1.

When the controller circuit in the evaluation board and the 1/2 duty LCD panel are used, insert the jump socket of the DT1 and remove the jump socket of the DT0.

When the controller circuit in the evaluation board and the static (1/1 duty) LCD panel are used, insert the jump sockets of the DT0 and DT1.

When the jump sockets of the DT0 and DT1 were set for the setting that was not 1/4 duty drive, the "DEMO mode" can use only a mode of "0", "1", "4" and "5". In addition, when "DEMO mode" was set to "2", "3", "6", "7", "8" and "9", the controller is ignored without operating, and the LED of the "ERROR" is turned on.

Table 12, EXPLANATION OF THE DT0 AND DT1 JUMP SOCKETS

Jump S	Sockets		he LCD Driver IC 43UGA)	
DT0	DT1	DT0 DT1		Operating Contents
Remove	Remove	0	0	1/4 Duty Drive Scheme
Insert	Remove	1	0	1/3 Duty Drive Scheme
Remove	Insert	0	1	1/2 Duty Drive Scheme
Insert	Insert	1	1	Static (1/1 Duty) Drive Scheme

#### **EXPLANATION OF THE LED MONITOR OF THE CONTROLLER CIRCUIT**

The LED monitor circuit is connected to FPGA. The customer can confirm the operating conditions of the

internal circuit of an FPGA by an LED monitor of the POW, BUSY, SEND, INH and ERROR.


Table 13. EXPLANATION OF THE LED MONITOR

	Symbol	Functions
POW	POW	LED monitor for main power supply ON/OFF.  The power supply is supplied by moving "POWER" switch to the "ON" position, and the LED of the "POW" is turned on when FPGA operated normally.
BUSY	BUSY	LED monitor for during the demonstration.  The automatic demonstration mode is selected by moving "DEMO mode" switch to the "8" or "9" positions, and the LED of the "BUSY" is turned on when a demonstration is started.
SEND	SEND	LED monitor for CCB serial data transfer.  The LED of the "SEND" is turned on when the CCB serial data are transferred by a demonstration or pushing the switches of the "Command Set" or "PWM Set".
INH	INH	LED monitor for INH signal state.  The LED of the "INH" is turned on when INH output is outputted to high level.
ERROR	ERROR	LED monitor for the setting state error of the switches.  The LED of the "ERROR" is turned on, when the setting of the switch of the "DEMO mode" and the setting of the jump socket of the "Duty" included an error.  At the time of error, the CCB serial data are not transferred even if pushing the switches of the "Command Set" or "PWM Set".

#### ABOUT THE PERIPHERAL CIRCUITS OF THE INH SIGNAL

The  $\overline{\text{INH}}$  signal after turning on the power supply is outputted to low level. After having pushed the first "Command Set" switch at the time of state that the  $\overline{\text{INH}}$  signal is low level, the CCB serial data is transferred. Afterwards, the  $\overline{\text{INH}}$  signal is outputted to high level. In

addition, the  $\overline{\text{INH}}$  signal is outputted to low level when pushes the switch of "Command Set" and the switch of "PWM Set" at the same time more than two seconds. At this time, the setting of CCB serial data is kept.

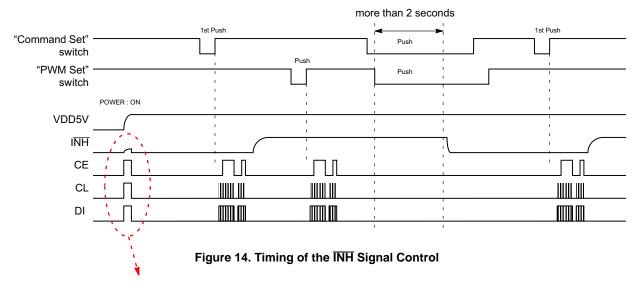

However, when during execution of the reset just after the power supply (Before execution of the configuration) and during execution of the configuration, the user I/O pin of FPGA used by the controller circuit of this evaluation board is the specifications that high level is outputted (the user I/O pin are used for CE, CL, DI,  $\overline{\text{INH}}$  and the OSCI output).

When the  $\overline{\text{INH}}$  signal is high level, the LCD driver IC becomes the display ON state. This may cause false display of the LCD.

This evaluation board constitutes CR filter circuit by resistor (R26) and capacitor (C25), and the  $\overline{INH}$  signal pulse just after power supply on is removed. When falling of the  $\overline{INH}$  signal or falling of the power supply, diode (D2) is used to rapidly discharge the electric charge of the capacitor. The resistor (R31) is pull-down resistor to protect a circuit when a jump socket was removed.

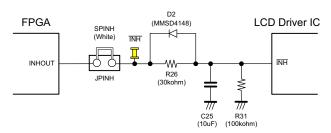


Figure 15. Peripheral Circuit of the INH Signal

Pulse width just after the power supply on : t<sub>1</sub> = about 100 [ms]

The specifications of the input low level of the INH signal :  $V_{IL} = 0.2 \ V_{DD} \ [V](max)$ 

Output signal level of FPGA : V<sub>OFPGA</sub> = 3.3 [V]

Power supply voltage of the LCD driver IC : V<sub>DD</sub> = 5.0 [V]

The calculation example of CR filter circuit using resistance value and capacitance value is shown in the following equations.

$$\begin{aligned} V_{IL} &= V_{OFPGA} \times \left(1 - e^{-(1/RC) \times t}\right) [V] \\ R \times C &= -\left(\frac{t_1}{\ln\left(\frac{V_{OFPGA} - V_{IL}}{V_{OFPGA}}\right)}\right) = \\ &= -\left(\frac{0.1}{\ln\left(\frac{3.3 - 0.2 \times 5}{3.3}\right)}\right) = 0.277 \end{aligned}$$

For example, when capacitor (C25) is  $10 \,\mu\text{F}$ , resistor (R26) is  $27.7 \,k\Omega$  ... Consequently,  $30 \,k\Omega$  choice.

The rise time to the input High level of the  $\overline{\text{INH}}$  signal is shown in the following equations.

$$\begin{split} &V_{IL} = V_{OFPGA} \times \left(1 - \epsilon^{-(1/RC) \times t}\right) [V] \\ &t_1 = -\left(R \times C \times In\left(\frac{V_{OFPGA} - V_{IL}}{V_{OFPGA}}\right)\right) = \\ &= -\left(30 \times 10^3 \times 10 \times 10^{-6} \times In\left(\frac{3.3 - 0.4 \times 5}{3.3}\right)\right) = \end{split}$$

 $= 279.5 \, \text{ms}$ 

The input high level of the  $\overline{\text{INH}}$  signal input into an LCD driver IC is shown in the following equations.

$$V_{IH} = \frac{R31}{R26 + R31} \times V_{OFPGA} = \frac{100}{30 + 100} \times 3.3 = 2.54 \text{ V}$$

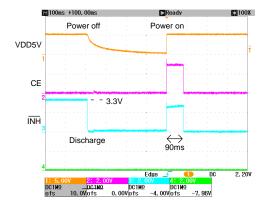


Figure 16. INH Signal Pulse Just After the Power Supply (FPGA Output)

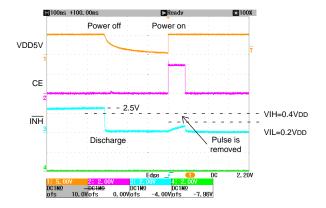


Figure 17. INH Signal Pulse Just After the Power Supply (LCD Driver IC Input)

### ABOUT THE PERIPHERAL CIRCUITS OF THE CCB SERIAL DATA SIGNALS (CE, CL, DI)

The resistors from R27 to R29 are the dumping resistance for waveform shaping. In addition, when waveform shaping is more necessary, connect a condenser (for example, from 100 to 1000 pF) to [C]. The resistors from R32 to R34 are pull-down resistor to protect a circuit when a jump socket was removed.

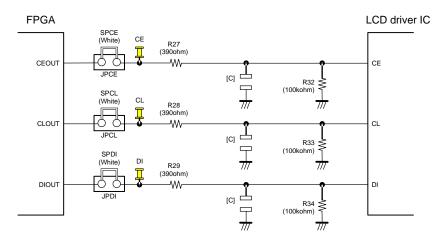


Figure 18. Peripheral Circuit of the CCB Serial Data Transfer Signal

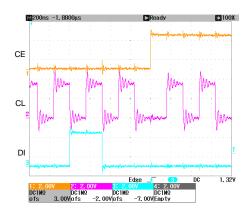


Figure 19. CCB Serial Data Signal (FPGA Output)

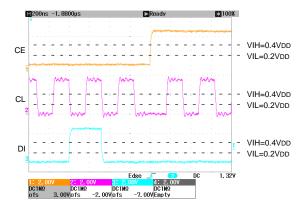


Figure 20. CCB Serial Data Signal (LCD Driver IC Input)

#### LCD PANEL SEGMENT ALLOTMENT

The LCD panel circuit of this evaluation board uses a socket pin, and LCD panel made in varitronix is inserted there. The specifications of the LCD panel are four common pins, 32 segment pins, twisted nematic (TN) type, reflection type, alphanumeric character display and  $70.00~\text{mm} \times 2.80~\text{mm}$ .

Four common output signals and 21 segment output signals of the LCD driver IC are connected to an LCD panel.

Because S28 output is connected to twelve segments of the LCD panel, the customer can confirm the waveform of big load.

The following figure and table shows the segment allotment of the 1/4 duty drive LCD panel.

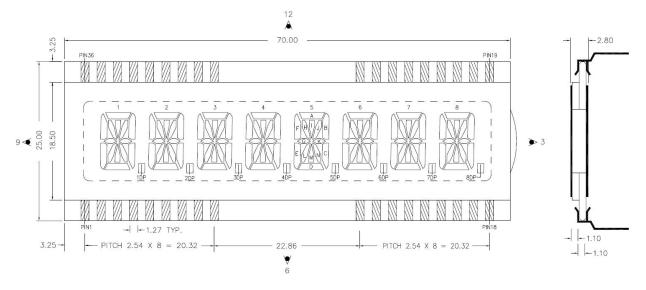


Figure 21. Segment Allotment of the LCD Panel

Table 14. RELATIONS BETWEEN THE LCD PANEL AND THE LCD DRIVER IC


		LCD	Panel		LCD Driver IC (When the 1/4 Duty Drive Is Set)				
Pin No.	СОМЗ	COM2	COM1	COM0	Connection Pin	COM4	СОМЗ	COM2	COM1
1	СОМЗ	-	-	-	COM4/S25	-	-	-	-
2	1D	1E	1F	-	S28	D100	D99	D98	D97
3	1N	1K	1J	11	S28	D100	D99	D98	D97
4	2D	2E	2F	-	S28	D100	D99	D98	D97
5	2N	2K	2J	21	S28	D100	D99	D98	D97
6	3D	3E	3F	-	S28	D100	D99	D98	D97
7	3N	3K	3J	31	S28	D100	D99	D98	D97
8	4D	4E	4F	-	<b>S</b> 5	D20	D19	D18	D17
9	4N	4K	4J	41	S6	D24	D23	D22	D21
10	5D	5E	5F	-	<b>S</b> 7	D28	D27	D26	D25
11	5N	5K	5J	51	S8	D32	D31	D30	D29
12	6D	6E	6F	-	S9	D36	D35	D34	D33
13	6N	6K	6J	61	S10	D40	D39	D38	D37
14	7D	7E	7F	-	S11	D44	D43	D42	D41
15	7N	7K	7J	71	S12	D48	D47	D46	D45
16	8D	8E	8F	-	S13	D52	D51	D50	D49
17	8N	8K	8J	81	S14	D56	D55	D54	D53
18	-	COM2	-	-	COM3/S26	_	-	-	-
19	-	-	-	COM0	COM1	-	-	-	-
20	8DP	8C	8B	8A	S24	D96	D95	D94	D93
21	8M	8L	8G	8H	S23	D92	D91	D90	D89
22	7DP	7C	7B	7A	S22	D88	D87	D86	D85
23	7M	7L	7G	7H	S21	D84	D83	D82	D81
24	6DP	6C	6B	6A	S20	D80	D79	D78	D77
25	6M	6L	6G	6H	S19	D76	D75	D74	D73
26	5DP	5C	5B	5A	S18	D72	D71	D70	D69
27	5M	5L	5G	5H	S17	D68	D67	D66	D65
28	4DP	4C	4B	4A	S16	D64	D63	D62	D61
29	4M	4L	4G	4H	S15	D60	D59	D58	D57
30	3DP	3C	3B	3A	S28	D100	D99	D98	D97
31	3M	3L	3G	3Н	S28	D100	D99	D98	D97
32	2DP	2C	2B	2A	S28	D100	D99	D98	D97
33	2M	2L	2G	2H	S28	D100	D99	D98	D97
34	1DP	1C	1B	1A	S28	D100	D99	D98	D97
35	1M	1L	1G	1H	S28	D100	D99	D98	D97
36	-	-	COM1	-	COM2/S27	-	-	-	-

#### TIMING OF THE CCB SERIAL DATA TRANSFER


### When the 1/4 Duty Drive Mode Is Set

When the controller circuit in the evaluation board and the 1/4 duty LCD panel are used, remove the jump sockets of the

DTO and DT1. The command transfer is the form that 1/4 duty drive mode and CL stop at low level.



The following figure shows the allotment of each bit.

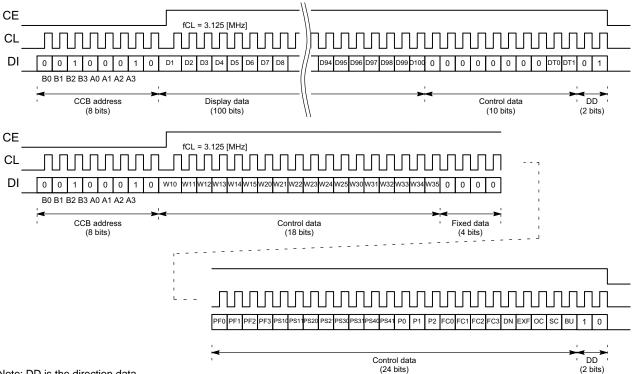

Note: DD is the direction data.

CCB address	: "44H"
D1 to D100	· Dienlay data

DT0, DT1 : LCD drive scheme (1/1 to 1/4 duty drive) setting control data. set by DT0 and DT1 jump sockets.

W10 to W15 : PWM duty data for S2/P2(ch1). set by W0 to W5 switches. W20 to W25 : PWM duty data for S3/P3(ch2). set by W0 to W5 switches. W30 to W35 : PWM duty data for S4/P4(ch3). set by W0 to W5 switches.

PF0 to PF3 : PWM output waveform frame frequency setting control data. set by PF0 to PF3 switches.
PS10. PS11 : General-purpose output port (S1/P1) function setting control data, set by P1 switch.

PS20, PS21 : General-purpose output port (S2/P2) function setting control data.

PS30, PS31 : General-purpose output port (S3/P3) function setting control data.

PS40, PS41 : General-purpose output port (S4/P4) function setting control data.

P0 to P2 : Segment output port/general-purpose output port switching control data.

FC0 to FC3 : Common/segment output waveform frame frequency setting control data. set by FC0 to FC3 switches.

DN : The S28 pin state setting control data.

EXF : External clock operating frequency setting control data. set by EXF switch.

OC : Internal oscillator operating mode/external clock operating mode switching control data. set by OC switch.


SC : On/off state of the segments control data. set by SC switch.

BU : Normal mode/power-saving mode switching control data. set by BU switch.


#### When the 1/3 Duty Drive Mode Is Set

When the controller circuit in the evaluation board and the 1/3 duty LCD panel are used, insert the jump socket of the DT0 and remove the jump socket of the DT1. When the jump sockets of the DT0 and DT1 were set for the setting that was not 1/4 duty drive, the "DEMO mode" can use only a mode

of "0", "1", "4" and "5". In addition, when "DEMO mode" was set to "2", "3", "6", "7", "8" and "9", the controller is ignored without operating. The command transfer is the form that 1/3 duty drive mode and CL stop at low level.



The following figure shows the allotment of each bit.

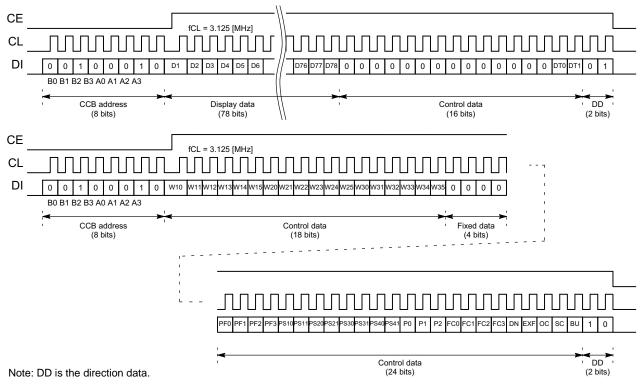

\_\_\_ ...

CCB address : "44H"
D1 to D78 : Display data.

DT0, DT1 : LCD drive scheme (1/1 to 1/4 duty drive) setting control data. set by DT0 and DT1 jump sockets.

W10 to W15 : PWM duty data for S2/P2(ch1). set by W0 to W5 switches. W20 to W25 : PWM duty data for S3/P3(ch2). set by W0 to W5 switches. W30 to W35 : PWM duty data for S4/P4(ch3). set by W0 to W5 switches.

PF0 to PF3 : PWM output waveform frame frequency setting control data. set by PF0 to PF3 switches. PS10, PS11 : General-purpose output port (S1/P1) function setting control data. set by P1 switch.

PS20, PS21 : General-purpose output port (S2/P2) function setting control data.
PS30, PS31 : General-purpose output port (S3/P3) function setting control data.
PS40, PS41 : General-purpose output port (S4/P4) function setting control data.
P0 to P2 : Segment output port/general-purpose output port switching control data.

FC0 to FC3 : Common/segment output waveform frame frequency setting control data. set by FC0 to FC3 switches.

DN : The S28 pin state setting control data.

EXF : External clock operating frequency setting control data. set by EXF switch.

OC : Internal oscillator operating mode/external clock operating mode switching control data. set by OC switch.

SC : On/off state of the segments control data. set by SC switch.


BU : Normal mode/power-saving mode switching control data. set by BU switch.

#### When the 1/2 Duty Drive Mode Is Set


BU

When the controller circuit in the evaluation board and the 1/2 duty LCD panel are used, insert the jump socket of the DT1 and remove the jump socket of the DT0. When the jump sockets of the DT0 and DT1 were set for the setting that was not 1/4 duty drive, the "DEMO mode" can use only a mode

of "0", "1", "4" and "5". In addition, when "DEMO mode" was set to "2", "3", "6", "7", "8" and "9", the controller is ignored without operating. The command transfer is the form that 1/2 duty drive mode and CL stop at low level.



The following figure shows the allotment of each bit.

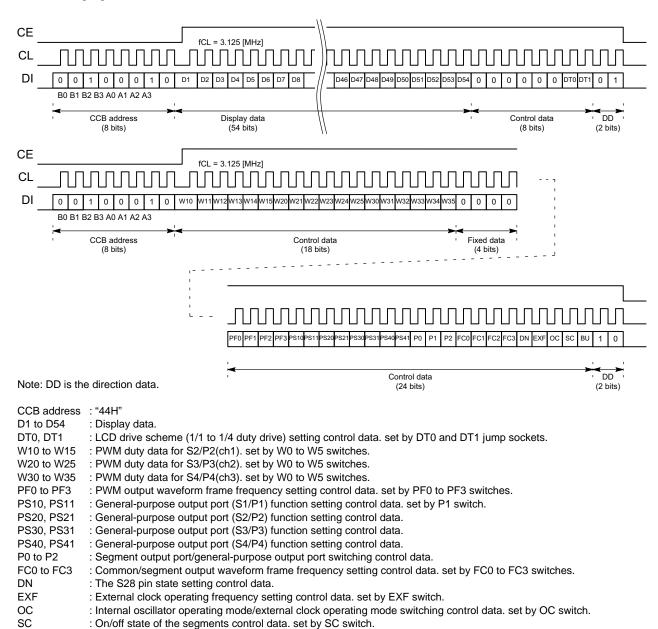


: Normal mode/power-saving mode switching control data. set by BU switch.


### When the Static (1/1 Duty) Drive Mode Is Set

When the controller circuit in the evaluation board and the static (1/1 duty) LCD panel are used, insert the jump sockets of the DT0 and DT1. When the jump sockets of the DT0 and DT1 were set for the setting that was not 1/4 duty drive, the "DEMO mode" can use only a mode of "0", "1", "4" and "5".

In addition, when "DEMO mode" was set to "2", "3", "6", "7", "8" and "9", the controller is ignored without operating. The command transfer is the form that static (1/1 duty) drive mode and CL stop at low level.



The following figure shows the allotment of each bit.

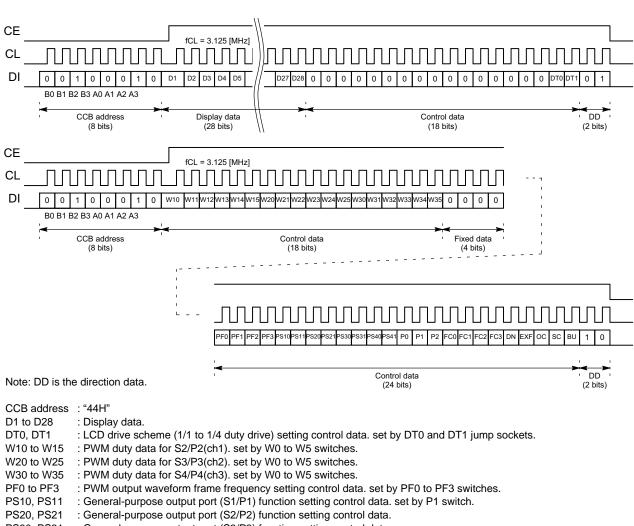

PS20, PS21 : General-purpose output port (S2/P2) function setting control data.

PS30, PS31 : General-purpose output port (S3/P3) function setting control data.

PS40, PS41 : General-purpose output port (S4/P4) function setting control data.

PO to P2 : Segment output port/general-purpose output port switching control data.

FC0 to FC3 : Common/segment output waveform frame frequency setting control data. set by FC0 to FC3 switches.

DN : The S28 pin state setting control data.

EXF : External clock operating frequency setting control data. set by EXF switch.

OC : Internal oscillator operating mode/external clock operating mode switching control data. set by OC switch.

SC : On/off state of the segments control data. set by SC switch.


BU : Normal mode/power-saving mode switching control data. set by BU switch.

#### **DEMONSTRATION TIMING CHART**

### All OFF Test Mode Timing (DEMO Mode = "0")

When demonstration mode is "0", all LCD segments and all LED are off. The customer can confirm off drive waveform outputting from the LCD driver IC. About the

example of the waveform which can confirm, refer to "Oscilloscope Observation Waveform".

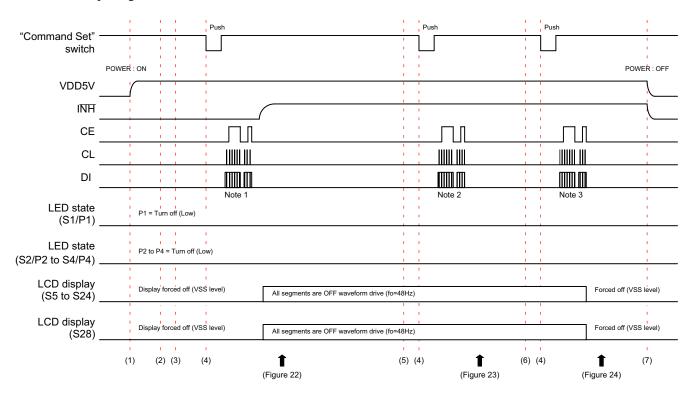

### Operation Sequence

- 1. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The evaluation mode is selected by moving "DEMO mode" switch to the "0" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC and BU) to set control data. For example, when the PF0 to PF3="L(0), L(0), L(0), L(0)", FC0 to FC3="L(0), L(0), L(0), L(0)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)" and BU="L(0)" are set.
- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".
- 5. Set the switches of SC="H(1)" and BU="L(0)".
- 6. Set the switches of SC="L(0)" and BU="H(1)".
- 7. The power supply of the evaluation board is turned off by moving "POWER" switch to the "OFF" position.

### Transfer Command Data

Note 1: D1=set by the switch of P1 to "0",
D2 to D100= all "0" data, DT0="0", DT1="0",
PF0 to PF3="0,0,0,0", FC0 to FC3="0,0,0,0",
W10 to W15="0,0,0,0,0", W20 to
W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0",
PS10="0", PS11="0", PS20="0", PS21="0",
PS30="0", PS31="0", PS40="0", PS41="0",
P0 to P2="1,0,0",
DN="1", EXF="0", OC="0", SC="0", BU="0".
The following figure shows the LCD display contents.




Note 2: SC="1", BU="0", others is set the same value.

Note 3: SC="0", BU="1", others is set the same value.

### All ON Test Mode Timing (DEMO Mode = "1")

When demonstration mode is "1", all LCD segments and all LED are on. The customer can confirm off drive waveform outputting from the LCD driver IC. About the example of the waveform which can confirm, refer to "Oscilloscope Observation Waveform".

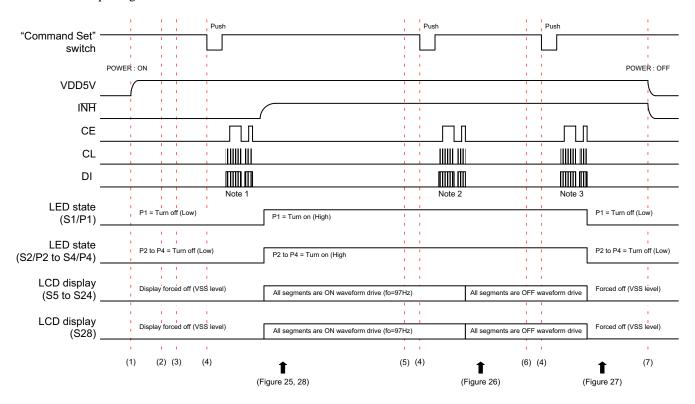

### Operation Sequence

- 1. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The evaluation mode is selected by moving "DEMO mode" switch to the "1" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC and BU) to set control data. For example, when the PF0 to PF3="L(0), L(0), L(0), FC0 to FC3="L(0), H(1), L(0), H(1)", P1="H(1)", EXF="L(0)", OC="L(0)", SC="L(0)" and BU="L(0)" are set.
- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".
- 5. Set the switches of SC="H(1)" and BU="L(0)".
- 6. Set the switches of SC="L(0)" and BU="H(1)".
- 7. The power supply of the evaluation board is turned off by moving "POWER" switch to the "OFF" position.

### Transfer Command Data

Note 1: D1=set by the switch of P1 to "1",
D2 to D100= all "1" data, DT0="0", DT1="0",
PF0 to PF3="0,0,0,0", FC0 to FC3="0,0,0,0",
W10 to W15="0,0,0,0,0", W20 to
W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0",
PS10="0", PS11="0", PS20="0", PS21="0",
PS30="0", PS31="0", PS40="0", PS41="0",
P0 to P2="1,0,0",
DN="1", EXF="0", OC="0", SC="0", BU="0".
The following figure shows the LCD display contents.




Note 2: SC="1", BU="0", others is set the same value.

Note 3: SC="0", BU="1", others is set the same value.

### LCD Display Test (1) Mode Timing (DEMO Mode = "2")

When demonstration mode is "2", LCD number display and the LED are all off. The customer can confirm on/off drive waveform outputting from the LCD driver IC. Because S28 output is connected to twelve segments, the

customer can confirm the waveform of big load. About the example of the waveform which can confirm, refer to "Oscilloscope Observation Waveform".

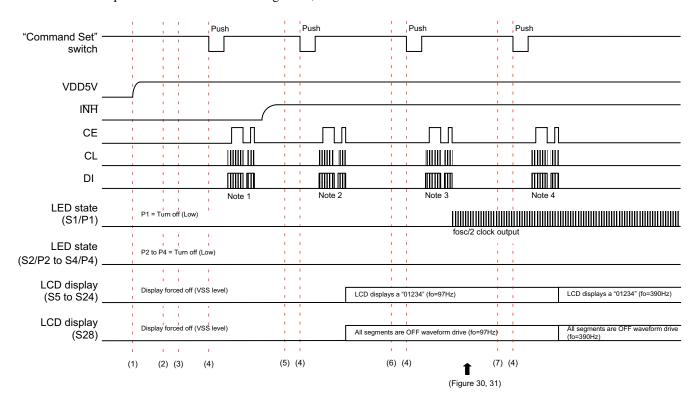

#### Operation Sequence

- 1. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The evaluation mode is selected by moving "DEMO mode" switch to the "2" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC and BU) to set control data . For example, when the PF0 to PF3="L(0), L(0), L(0), L(0)", FC0 to FC3="L(0), H(1), L(0), H(1)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)" and BU="H(1)" are set.
- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".
- 5. Set the switches of SC="L(0)" and BU="L(0)".
- 6. Set the switch of P1="H(1)".
- 7. Set the switches of FC0 to FC3="H(1), H(1), H(1), H(1)".

### Transfer Command Data

Note 1: D1="0", D2 to D16= all "0" data,
D17 to D96= "01234" display data,
D97 to D100= all "0" data, DT0="0", DT1="0",
PF0 to PF3="0,0,0,0", FC0 to FC3="0,1,0,1",
W10 to W15="0,0,0,0,0,0", W20 to
W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0",
PS10="0", PS11="0", PS20="0", PS21="0",
PS30="0", PS31="0", PS40="0", PS41="0",
P0 to P2="1,0,0",
DN="1", EXF="0", OC="0", SC="0", BU="1".

Note 2: BU="0", others is set the same value.
"01234" display data is D[96:17] = 0110 0010
0111 0010 0011 0010 0110 0000 0111 0000
0100 0010 0100 1000 0100 1100 0000 0000
0000 1110.

The following figure shows the LCD display contents.




Note 3: D1="0", PS10 and PS11=set by the switch of P1 to "1.0", others is set the same value.

Note 4: FC0 to FC3="1,1,1,1", others is set the same value.

#### LCD Display Test (2) Mode Timing (DEMO Mode = "3")

When demonstration mode is "3", LCD alphabet display and the LED are all off. The customer can confirm on/off drive waveform outputting from the LCD driver IC. Because S28 output is connected to twelve segments, the

customer can confirm the waveform of big load. About the example of the waveform which can confirm, refer to "Oscilloscope Observation Waveform".

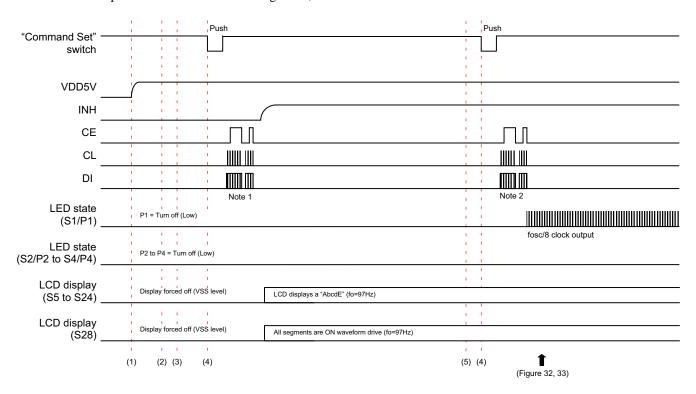


#### Operation Sequence

- 1. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The evaluation mode is selected by moving "DEMO mode" switch to the "3" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC and BU) to set control data. For example, when the PF0 to PF3="L(0), L(0), L(0), L(0), FC0 to FC3="L(0), H(1), L(0), H(1)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)" and BU="L(0)" are set.
- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".
- 5. Set the switch of P1="H(1)".

# Transfer Command Data

Note 1: D1="0", D2 to D16= all "0" data,
D17 to D96= "AbcdE" display data,
D97 to D100= all "1" data,
DT0="0", DT1="0", PF0 to PF3="0,0,0,0",
FC0 to FC3="0,1,0,1",
W10 to W15="0,0,0,0,0,0",
W20 to W25="0,0,0,0,0,0",
W30 to W35="0,0,0,0,0,0",
PS10="0", PS11="0", PS20="0", PS21="0",
PS30="0", PS31="0", PS40="0", PS41="0",
P0 to P2="1,0,0",
DN="1", EXF="0", OC="0", SC="0", BU="0".

"AbcdE" display data is D[96:17] = 0001 0010 0110 0010 0000 0010 0100 0010 0111 0010 0100 1110 0100 1110 0100 1100 0100 1100 0100 1110 0100 0110. The following figure shows the LCD display contents.




Note 2: D1="0", PS10 and PS11= set by the switch of P1 to "0,1", others is set the same value.

# Segment Test Mode Timing (DEMO Mode = "4")

When demonstration mode is "4", the segment of the LCD displays on in turn whenever the customer pushes the switch

of "Command Set". The customer can confirm on/off drive waveform outputting from the LCD driver IC.

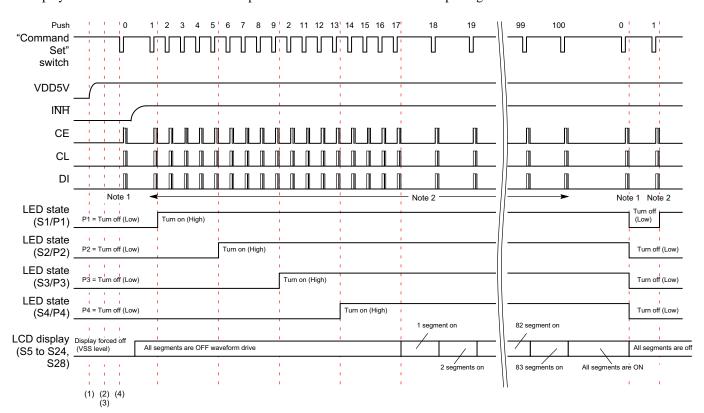

### **Operation Sequence**

- 1. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The evaluation mode is selected by moving "DEMO mode" switch to the "4" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC and BU) to set control data. For example, when the PF0 to PF3="L(0), L(0), L(0), FC0 to FC3="L(0), H(1), L(0), H(1)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)" and BU="L(0)" are set.
- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".

## Transfer Command Data


Note 1: D1 to D100= all "0" data,
DT0="0", DT1="0", PF0 to PF3="0,0,0,0",
FC0 to FC3="0,1,0,1",
W10 to W15="0,0,0,0,0,0", W20 to
W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0",
PS10="0", PS11="0", PS20="0", PS21="0",
PS30="0", PS31="0", PS40="0", PS41="0",
P0 to P2="1,0,0",
DN="1", EXF="0", OC="0", SC="0", BU="0".

- Note 2: The display data which made "1" in turn from D1 to D100 are transferred whenever the customer pushes the switch of "Command Set".
  - When "Push 1": D1="1",D2 to D100= all "0" data.
  - When "Push 2": D1,D2="1,1",D3 to D100= all "0" data.
  - When "Push 3": D1,D2,D3="1,1,1", D4 to D100= all "0" data.
  - When "Push 17": D1 to D17= all "1" data,D18 to D100= all "0" data.
  - When "Push 99": D1 to D99= all "1" data, D100="0".
  - When "Push 100": D1 to D100= all "1" data.

### Common Test Mode Timing (DEMO Mode = "5")

When demonstration mode is "5", LCD segment corresponding to same COM are all ON. Therefore, when COM1 is on, LED turn on the light. The customer can

confirm on/off drive waveform outputting from the LCD driver IC.

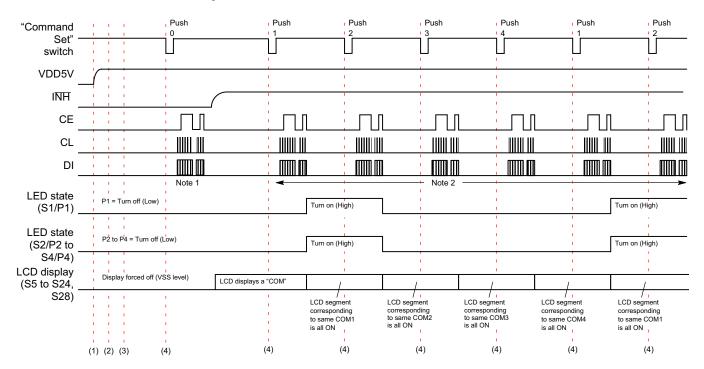

### Operation Sequence

- The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The evaluation mode is selected by moving "DEMO mode" switch to the "5" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC and BU) to set control data. For example, when the PF0 to PF3="L(0), L(0), L(0), FC0 to FC3="L(0), H(1), L(0), H(1)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)" and BU="L(0)" are set.
- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".

# Transfer Command Data

Note 1: D1 to D16= all "0" data, D17 to D96= "COM" display data, D97 to D100= all "0" data, DT0="0", DT1="0", PF0 to PF3="0,0,0,0", FC0 to FC3="0,1,0,1", W10 to W15="0,0,0,0,0", W20 to W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0", PS10="0", PS11="0", PS20="0", PS21="0", PS30="0", PS31="0", PS40="0", PS41="0", P0 to P2="1,0,0", DN="1", EXF="0", OC="0", SC="0", BU="0".



Note 2: The display data from D1 to D100 which turned on all the LCD segments according with same COM are transferred whenever the customer pushes the switch of "Command Send".

When "Push 1": D1, D5, D9, D13, D17, D21, D25, D29, D33, D37, D41, D45, D49, D53, D57, D61, D65, D69, D73, D77, D81, D85, D89, D93, D97 = all "1" data, Other display data= all "0" data



When "Push 2": D2, D6, D10, D14, D18, D22,
D26, D30, D34, D38, D42, D46, D50, D54,
D58, D62, D66, D70, D74, D78, D82, D86,
D90, D94, D98= all "1" data, Other display data = all "0" data



When "Push 3": D3, D7, D11, D15, D19, D23, D27, D31, D35, D39, D43, D47, D51, D55, D59, D63, D67, D71, D75, D79, D83, D87, D91, D95, D99= all "1" data, Other display data = all "0" data




When "Push 4": D4, D8, D12, D16, D20, D24, D28, D32, D36, D40, D44, D48, D52, D56, D60, D64, D68, D72, D76, D80, D84, D88, D92, D96, D100= all "1" data, Other display data = all "0" data



### LED (PWM) Test (1) Mode Timing (DEMO Mode = "6")

When demonstration mode is "6", the PWM duty is selected by switches from W0 to W5. Then, S2/P2(ch1), S3/P3(ch2) and S4/P4(ch3) can set same duty. The customer

can confirm LED drive waveform outputting from the LCD driver IC. About the example of the waveform which can confirm, refer to "Oscilloscope Observation Waveform".

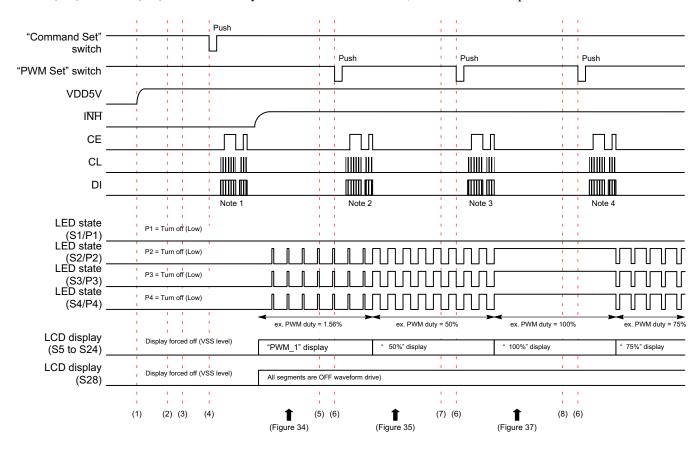

### Operation Sequence

- 1. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The evaluation mode is selected by moving "DEMO mode" switch to the "6" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC, BU and W0 to W5) to set control data.

For example, when the PF0 to PF3="L(0), H(1), L(0), L(0)", FC0 to FC3="L(0), H(1), L(0), H(1)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)", BU="L(0)" and W0 to W5="L(0), L(0), L(0), L(0), L(0), L(0)", are set.

- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".
- 5. Set the switches of W0 to W5="H(1), H(1), H(1), H(1), H(1), L(0)".
- 6. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "PWM Set".
- 7. Set the switches of W0 to W5="H(1), H(1), H(1), H(1), H(1), H(1)".
- 8. Set the switches of W0 to W5="H(1), H(1), H(1), H(1), H(1), L(0), H(1)".

#### Transfer Command Data

Note 1: D1 to D16= all "0" data,

D17 to D96= "PWM\_1" display data,

D97 to D100= all "0" data, DT0="0", DT1="0",

PF0 to PF3="0,1,0,0", FC0 to FC3="0,1,0,1",

W10 to W15="0,0,0,0,0,0", W20 to

W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0",

PS10="1", PS11="1", PS20="1", PS21="0",

PS30="0", PS31="1", PS40="1", PS41="1",

P0 to P2="1,0,0",

DN="1", EXF="0", OC="0", SC="0", BU="0".

"PWM\_1" display data is D[96:17] = 0110 0000 0000 0000 0110 0001 0110 0100 0011 0010 0000 0000 0000 1000 0010 0110 1000 0110 0100 0110.


The following figure shows the LCD display contents.



Note 2: D17 to D96= "50%" display data, W10 to W15="1,1,1,1,1,0", W20 to

W25="1,1,1,1,1,0", W30 to W35="1,1,1,1,1,0", others is set the same.

The following figure shows the LCD display contents.



The PWM duty is displayed there.

Percent

yed there. (1 to 100)

Note 3: D17 to D96= "100%" display data, W10 to W15="1,1,1,1,1,1", W20 to

W25="1,1,1,1,1,1", W30 to W35="1,1,1,1,1,1",

others is set the same.

Note 4: D17 to D96= "75%" display data,


W10 to W15="1,1,1,1,0,1", W20 to W25="1,1,1,1,0,1", W30 to W35="1,1,1,1,0,1",

others is set the same.

## LED (PWM) Test (2) Mode Timing (DEMO Mode = "7")

When demonstration mode is "7", the PWM duty is selected by switches from W0 to W5. The LCD driver IC (LC75843UGA) can control the PWM function of up to three channels separately. Therefore this evaluation board

divides RGB color LED into three groups. The customer can set duty of each group whenever the customer pushes the switch of "Command Set". The customer can confirm LED drive waveform outputting from the LCD driver IC.

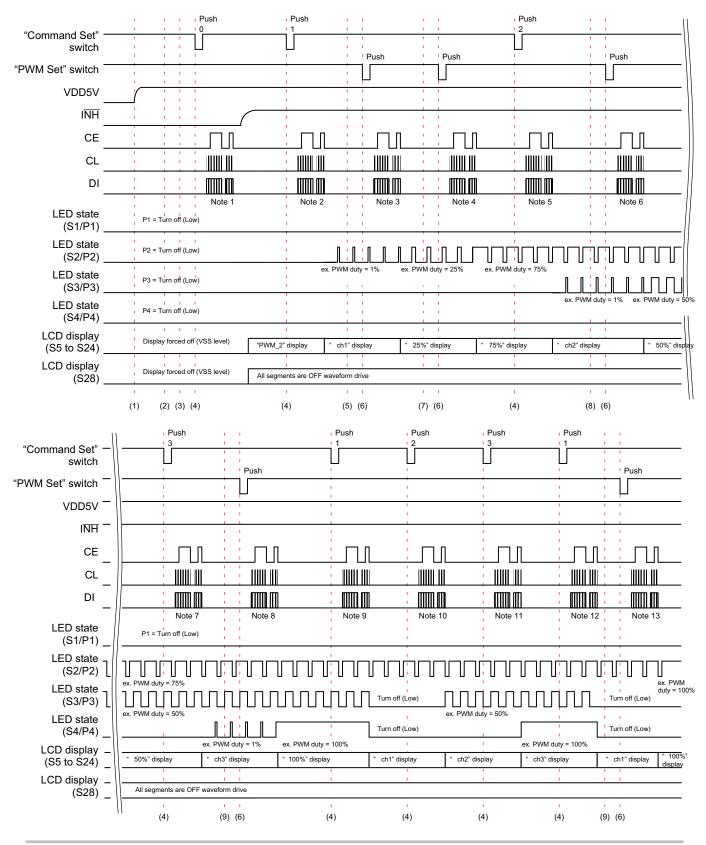

#### Operation Sequence

- 1. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The evaluation mode is selected by moving "DEMO mode" switch to the "7" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC, BU and W0 to W5) to set control data.

For example, when the PF0 to PF3="L(0), H(1), H(1), L(0)", FC0 to FC3="L(0), H(1), L(0), H(1)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)", BU="L(0)" and W0 to W5="L(0), L(0), L(0), L(0), L(0), L(0), L(0)", are set.


- 4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".
- 5. Set the switches of W0 to W5="H(1), H(1), H(1), H(1), H(1), L(0)".
- 6. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "PWM Set".
- 7. Set the switches of W0 to W5="H(1), H(1), H(1), H(1), H(1), L(0), H(1)".
- 8. Set the switches of W0 to W5="H(1), H(1), H(1), H(1), H(1), L(0)".
- 9. Set the switches of W0 to W5="H(1), H(1), H(1), H(1), H(1), H(1)".

#### Transfer Command Data

Note 1: D1 to D16= all "0" data,
D17 to D96= "PWM\_2" display data,
D97 to D100= all "0" data, DT0="0", DT1="0",
DT0="0", DT1="0", PF0 to PF3="0,1,1,0",
FC0 to FC3="0,1,0,1",
W10 to W15="0,0,0,0,0,0",
W20 to W25="0,0,0,0,0,0",
W30 to W35="0,0,0,0,0,0",
PS10="0", PS11="0", PS20="0", PS21="0",
PS30="0", PS31="0", PS40="0", PS41="0",
P0 to P2="1,0,0",
DN="1", EXF="0", OC="0", SC="0", BU="0".


"PWM\_2" display data is D[96:17] = 0011 0010 0000 0000 0110 0001 0110 0100 0011 0010 0100 1100 0000 1000 0010 0110 1000 0110 0100 0110.

The following figure shows the LCD display contents.



Note 2: D1 to D16= all "0" data, D17 to D96= "ch1" display data, W10 to W15="0,0,0,0,0,0", W20 to W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="0", PS40="0", PS41="0", others is set the same.


The following figure shows the LCD display contents.



The PWM channel is displayed there.

Note 3: D1 to D16= all "0" data, D17 to D96= "25%" display data, W10 to W15="1,1,1,1,0,0", W20 to W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="0", PS40="0", PS41="0", others is set the same.

The following figure shows the LCD display contents.




Note 4: D1 to D16= all "0" data, D17 to D96= "75%" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="0", PS40="0", PS41="0", others is set the same.


Note 5: D1 to D16= all "0" data, D17 to D96= "ch2" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="1", PS40="0", PS41="0", others is set the same.

Note 6: D1 to D16= all "0" data, D17 to D96= "50%" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="1,1,1,1,1,0", W30 to W35="0,0,0,0,0,0", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="1", PS40="0", PS41="0", others is set the same.

- Note 7: D1 to D16= all "0" data, D17 to D96= " ch3" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="1,1,1,1,1,0", W30 to W35="0,0,0,0,0,0", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="1", PS40="1", PS41="1", others is set the same.
- Note 8: D1 to D16= all "0" data, D17 to D96= "100%" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="1,1,1,1,1,0", W30 to W35="1,1,1,1,1,1", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="1", PS40="1", PS41="1", others is set the same.
- Note 9: D1 to D16= all "0" data, D17 to D96= " ch1" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="1,1,1,1,1,0", W30 to W35="1,1,1,1,1,1", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="0", PS40="0", PS41="0", others is set the same.
- Note 10: D1 to D16= all "0" data, D17 to D96= "ch2" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="1,1,1,1,1,0", W30 to W35="1,1,1,1,1,1", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="1", PS40="0", PS41="0", others is set the same.


- Note 11: D1 to D16= all "0" data, D17 to D96= " ch3" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="1,1,1,1,1,0", W30 to W35="1,1,1,1,1,1", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="1", PS40="1", PS41="1", others is set the same.
- Note 12: D1 to D16= all "0" data, D17 to D96= "ch1" display data, W10 to W15="1,1,1,1,0,1", W20 to W25="1,1,1,1,1,0", W30 to W35="1,1,1,1,1,1", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="0", PS40="0", PS41="0", others is set the same.
- Note 13: D1 to D16= all "0" data, D17 to D96= " 100%" display data, W10 to W15="1,1,1,1,1,1", W20 to W25="1,1,1,1,1,0", W30 to W35="1,1,1,1,1,1", PS10="0", PS11="0", PS20="1", PS21="0", PS30="0", PS31="0", PS40="0", PS41="0", others is set the same.

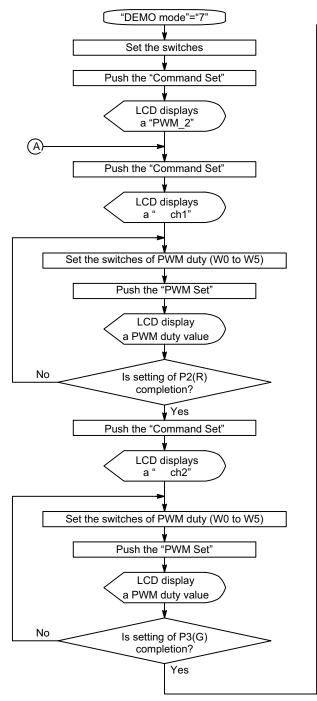

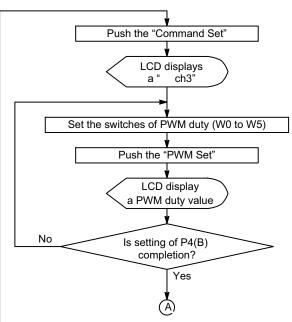

### **Demonstration (1) Mode Timing (DEMO Mode = "8")**

When demonstration mode is "8", LCD number display count ups every second and the LED is eight colors of lighting. The customer can confirm display of LCD and LED by an automatic demonstration.

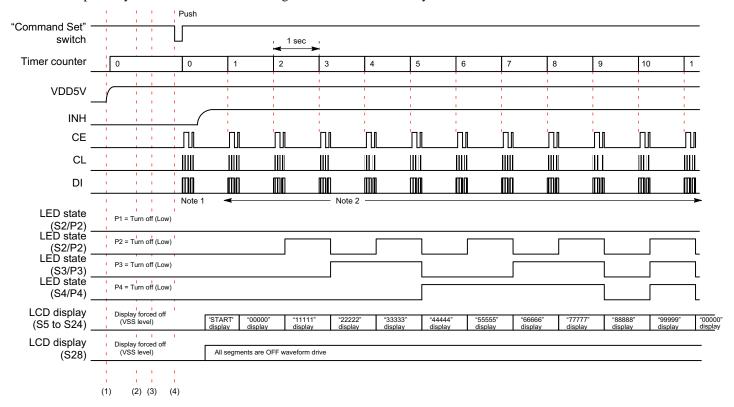

#### Operation Sequence

- The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The automatic demonstration mode is selected by moving "DEMO mode" switch to the "8" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC, BU and W0 to W5) to set control data.

For example, when the PF0 to PF3="L(0), H(1), H(1), L(0)", FC0 to FC3="L(0), H(1), L(0), H(1)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)", BU="L(0)" and W0 to W5="L(0), L(0), L(0), L(0), L(0), L(0)", are set.

4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".

### Transfer Command Data

Note 1: D1 to D16= all "0" data, D17 to D96= "START" display data, D97 to D100= all "0" data, DT0="0", DT1="0", PF0 to PF3="0,1,1,0", FC0 to FC3="0,1,0,1", W10 to W15="0,0,0,0,0,0", W20 to W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0", PS10="0", PS11="0", PS20="0", PS21="0",

PS30="0", PS31="0", PS40="0", PS41="0", P0 to P2="1,0,0", DN="1", EXF="0", OC="0", SC="0", BU="0".

"START" display data is D[96:17] = 0001 1000 0011 0010 0111 0010 0001 1000 0101 0010 0000 0000 1100 0110 0100 0110 0001 0000 0100 1010.

The following figure shows the LCD display contents.



Note 2: The display data by the timer counter value are transferred.

- When "1": D5,D9,D13="0,0,0",D17 to D96= "00000" display data,Other display data = all "0" data
- When "2": D5,D9,D13="1,0,0", D17 to D96= "11111" display data, Other display data = all "0" data
- When "3" : D5,D9,D13="0,1,0",D17 to D96= "22222" display data,Other display data = all "0" data
- When "4": D5,D9,D13="1,1,0", D17 to D96= "33333" display data,

Other display data = all "0" data


- When "5": D5,D9,D13="0,0,1", D17 to D96= "44444" display data, Other display data = all "0" data
- When "6": D5,D9,D13="1,0,1",
  D17 to D96= "55555" display data,
  Other display data = all "0" data
- When "7": D5,D9,D13="0,1,1", D17 to D96= "66666" display data, Other display data = all "0" data
- When "8": D5,D9,D13="1,1,1", D17 to D96= "77777" display data, Other display data = all "0" data
- When "9": D5,D9,D13="0,0,0", D17 to D96= "88888" display data,

Other display data = all "0" data

- When "10": D5,D9,D13="1,1,1", D17 to D96= "99999" display data, Other display data = all "0" data

"99999" display data is D[96:17] = 0111 0010 0111 0010 0111 0010 0111 0010 0111 0010 0100 1010 0100 1010 0100 1010 0100 1010 0100 1010.


The following figure shows the LCD display contents.



#### Demonstration (2) Mode Timing (DEMO Mode = "9")

When demonstration mode is "9", PWM duty of the LED drive changes every 100 ms. The customer can confirm

LED brightness adjustment function using PWM duty by an automatic demonstration.

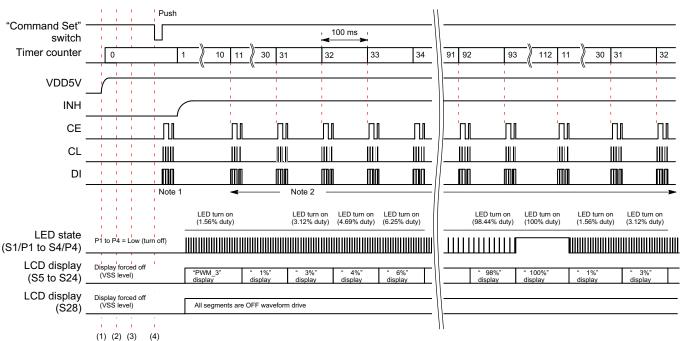

### Operation Sequence

- 1. The power supply of the evaluation board is turned on by moving "POWER" switch to the "ON" position.
- 2. The automatic demonstration mode is selected by moving "DEMO mode" switch to the "9" position.
- 3. Set the switches (PF0 to PF3, FC0 to FC3, P1, EXF, OC, SC, BU and W0 to W5) to set control data.

For example, when the PF0 to PF3="L(0), H(1), H(1), L(0)", FC0 to FC3="L(0), H(1), L(0), H(1)", P1="L(0)", EXF="L(0)", OC="L(0)", SC="L(0)", BU="L(0)" and W0 to W5="L(0), L(0), L(0), L(0), L(0), L(0)", are set.

4. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".

# Transfer Command Data

Note 1: D1 to D16= all "0" data, D17 to D96= "AUTO" display data, D97 to D100= all "0" data, DT0="0", DT1="0", PF0 to PF3="0,1,1,0", FC0 to FC3="0,1,0,1", W10 to W15="0,0,0,0,0,0", W20 to W25="0,0,0,0,0,0", W30 to W35="0,0,0,0,0,0", PS10="1", PS11="1", PS20="1", PS21="0", PS30="0", PS31="1", PS40="1", PS41="1",

P0 to P2="1,0,0", DN="1", EXF="0", OC="0", SC="0", BU="0".


"AUTO" display data is D[96:17] = 0111 0010 0000 0000 0110 0001 0110 0100 0011 0010 0100 1000 0000 1000 0010 0110 1000 0110 0100 0110.

The following figure shows the LCD display contents.



Note 2: D17 to D96= "%" display data, W10 to W15, W20 to W25 and W30 to W35 are set by the timer counter value. others is set the same value.


The following figure shows the LCD display contents.



### **DEMO Mode Change Timing**

The following figure shows the timing example when the customer changes the switch of "DEMO mode" successively. The update of the control data and display data in the LCD driver IC does not change only by having changed the switch of "DEMO mode". When the customer

pushed the switch of "Command Set" after having changed the switch of "DEMO mode", command is transferred. The LCD panel display is cleared when the customer pushes the switch of "Command Set" after having set the switch of "DEMO mode" to "0".

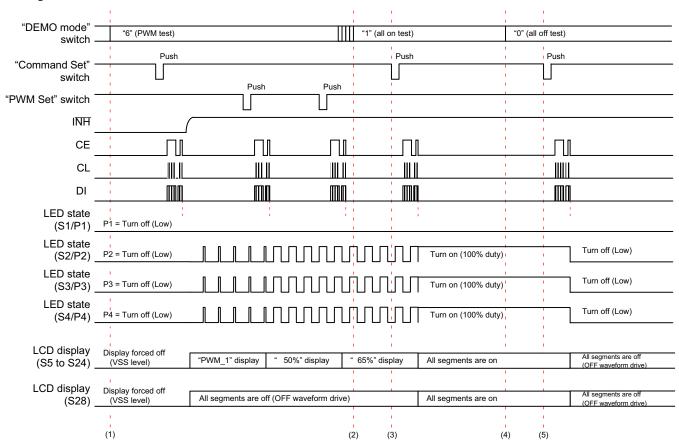

# Operation Sequence

- 1. The evaluation mode can be selected by moving the switch of "DEMO mode".
- 2. The evaluation mode can be changed by moving the switch of "DEMO mode".
- The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set".
- 4. The All OFF test mode is selected by moving "DEMO mode" switch to the "0" position.
- 5. The CCB serial data are transferred from a controller circuit to LCD driver IC by pushing the switch of "Command Set". Thereby, the LCD panel display is cleared.

## OSCILLOSCOPE OBSERVATION WAVEFORM

# Waveform of All OFF Test Mode (DEMO Mode = "0")

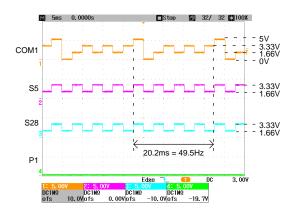


Figure 22. LCD Drive Waveform (SC = 0, BU = 0)

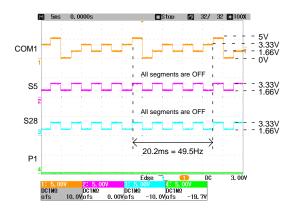


Figure 23. LCD Drive Waveform (SC = 1, BU = 0)

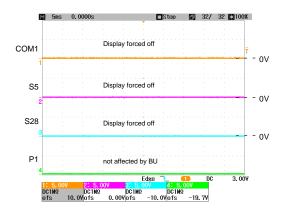


Figure 24. LCD Drive Waveform (SC = 0, BU = 1)

## Waveform of All ON Test Mode (DEMO Mode = "1")

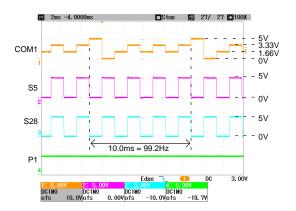


Figure 25. LCD Drive Waveform (SC = 0, BU = 0)

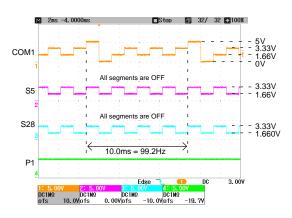


Figure 26. LCD Drive Waveform (SC = 1, BU = 0)

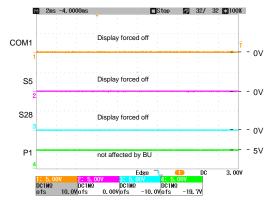


Figure 27. LCD Drive Waveform (SC = 0, BU = 1)

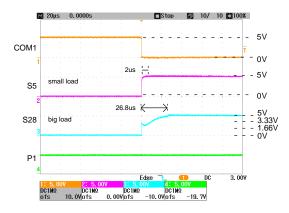


Figure 28. LCD Drive Rising Waveform of Big Load (SC = 0, BU = 0, P1 = 1)

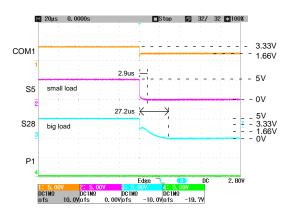


Figure 29. LCD Drive Falling Waveform of Big Load (SC = 0, BU = 0, P1 = 0)

## Waveform of LCD Display Test (1) Mode (DEMO Mode = "2")

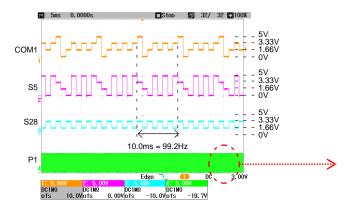


Figure 30. Monitor Clock Output from a General-Purpose Port

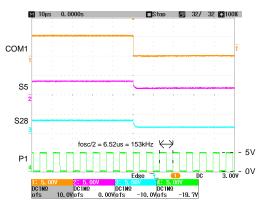


Figure 31. Monitor Clock Output from a General-Purpose Port (Zoom In)

# Waveform of LCD Display Test (2) Mode (DEMO Mode = "3")

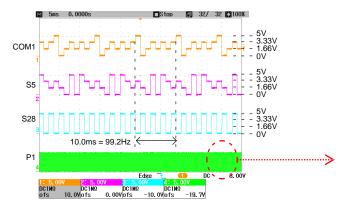


Figure 32. Monitor Clock Output from a General-Purpose Port

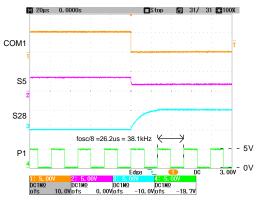


Figure 33. Monitor Clock Output from a General-Purpose Port (Zoom In)

## Waveform of LED (PWM) Test (1) Mode (DEMO Mode = "6")

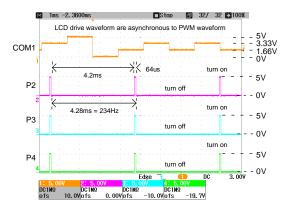


Figure 34. 1%-duty PWM Drive Waveform (PF0 to PF3 = 0100, W0 to W5 = 000000)

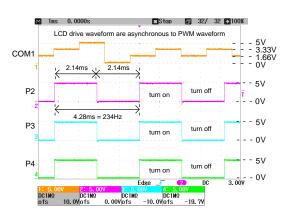


Figure 35. 50%-duty PWM Drive Waveform (PF0 to PF3 = 0100, W0 to W5 = 111110)

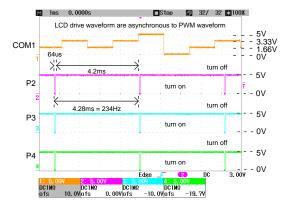


Figure 36. 98%-duty PWM Drive Waveform (PF0 to PF3 = 0100, W0 to W5 = 011111)

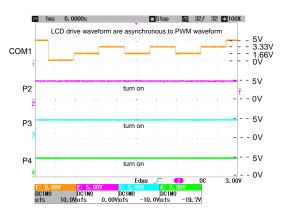


Figure 37. 100%-duty PWM Drive Waveform (PF0 to PF3 = 0100, W0 to W5 = 111111)

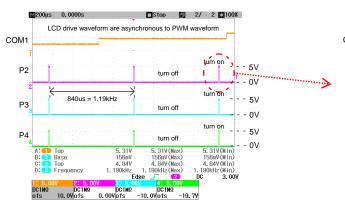


Figure 38. 1%-duty PWM Drive Waveform (PF0 to PF3 = 0101, W0 to W5 = 000000)

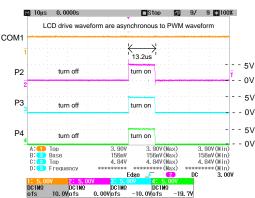


Figure 39. 1%-duty PWM Drive Waveform (Zoom In)

## **Waveform of LCD Drive Output**

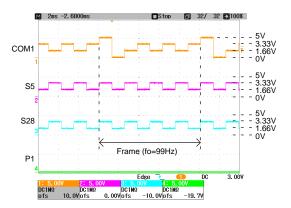


Figure 40. 1/4 Duty LCD Drive Scheme (JPDT0 = Remove, JPDT1 = Remove)

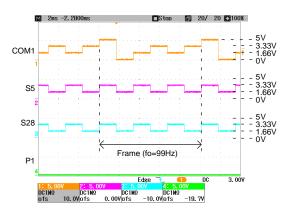


Figure 41. 1/3 Duty LCD Drive Scheme (JPDT0 = Insert, JPDT1 = Remove)

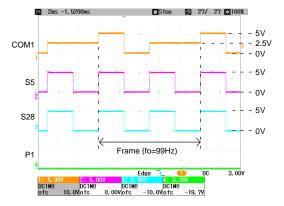


Figure 42. 1/2 Duty LCD Drive Scheme (JPDT0 = Remove, JPDT1 = Insert)

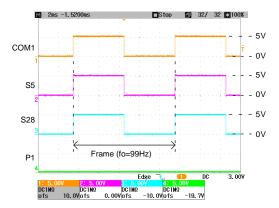


Figure 43. 1/1 Duty LCD Drive Scheme (JPDT0 = Insert, JPDT1 = Insert)

# PRINTED CIRCUIT BOARD LAYOUT

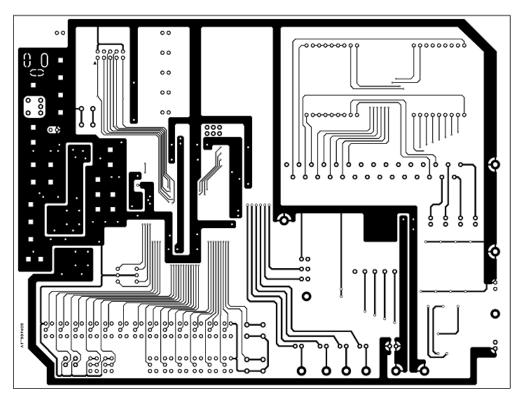


Figure 44. Pattern1 Layer of LC75843UGAGEVB Reference Design

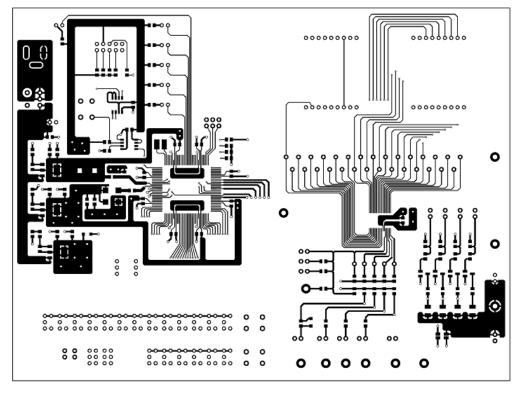


Figure 45. Pattern2 Layer of LC75843UGAGEVB Reference Design

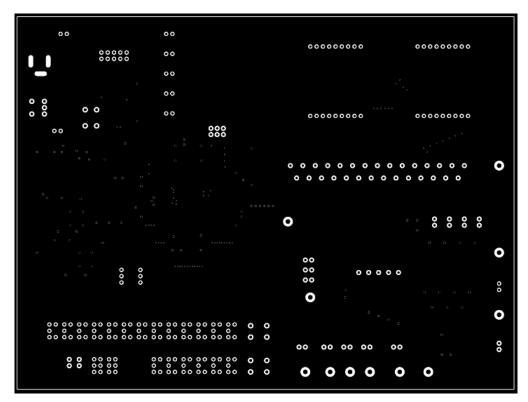


Figure 46. Regist1 Layer of LC75843UGAGEVB Reference Design

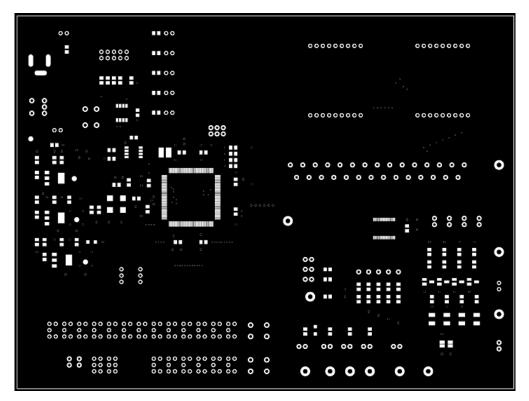


Figure 47. Regist2 Layer of LC75843UGAGEVB Reference Design

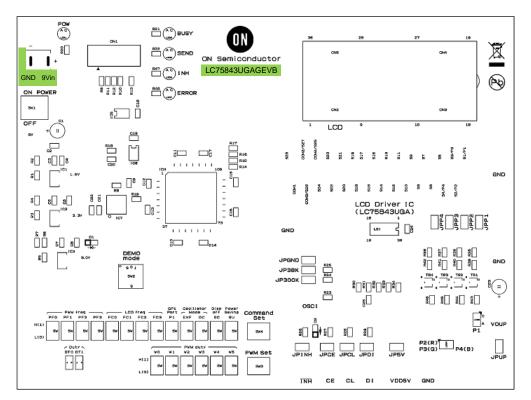


Figure 48. Silk2 Layer of LC75843UGAGEVB Reference Design

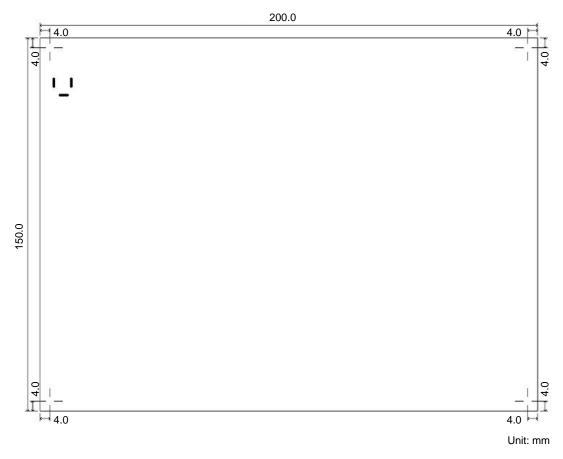


Figure 49. Outside Dimension of LC75843UGAGEVB Reference Design


## ABOUT THE USE OF THE AC ADAPTER

If the customer prepares parts and remodels it by soldering, the customer can change a main power supply into an evaluation board supplied from an AC adapter. In this

case, please be careful about polarity enough. When the AC adapter of the wrong polarity was used, the evaluation board may be damaged.


**Table 15. RECOMMENDATION PARTS** 

Description	Manafuacturer	Manufacturer Part Number	Explanation	Lead Free
DC power jack	Marushin Electric Mfg	MJ-179PH	Mate Plug 2.1 mm	Yes
AC adapter	Go Forward Enterprise	GF12-US0913	DC9V, Center Plus	Yes

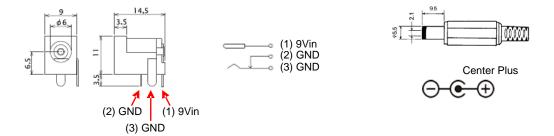

Contents of Alteration Work

- (1) Remove the Socket Pins ("9Vin", "GND").
- (2) Take Off a Label.
- (3) Soldering the DC Power Jack.

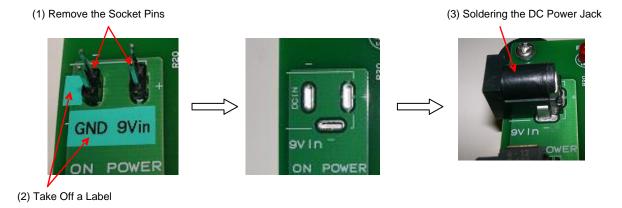

# **BILL OF MATERIALS**

Table 16. BILL OF MATERIALS OF LC75843UGA EVALUATION BOARD (LC75843UGAGEVB)

Designator	Qty.	Description	Part Number	Value	Manufacturer
IC1-IC3	3	Linear Regulator (LDO)	LM317EMP	1.2 V to 37 V, 1 Amax	National Semiconductors
IC4	1	FPGA (Cyclone)	EP1C3T144C8N	TQFP144	ALTERA
IC5	1	Configuration ROM (EEPROM)	EPCS1SI8N	1 Mbit	ALTERA
IC6	1	Power Supply Voltage Supervisors	TLC7733ID	VTH = 2.93 V	TI
IC7	1	Crystal Oscillator	KC7050B50.0000C31B00	50.0000 MHz	KYOCERA
LSI	1	LCD Driver IC	LC75843UGA	1/1 to 1/4 Duty, 100 Segments(max)	ON Semiconductor
LCD	1	LCD Panel	VIM-828-DP5.7-6-HV-RH-W	14SEGx8DIGIT, 1/4 Duty	Varitronix
TR1-TR4	4	NPN Transistor	2SC2712-GR(F)	VCEO = 50 V, Ic = 150 mA	Toshiba
D1, D2	2	Diode	MMSD4148T	VR = 100 V, IF = 0.2 A	ON Semiconductor
LED1, LED7	1	LED	L-934ID	Red, D = 3 mm	Kingbright
LED2, LED3, LED6	3	LED	L-934SGD	Green, D = 3 mm	Kingbright
LED4	1	LED	LATBT66B	RGB-color, Anode Common	Siemens AG (OSRAM)
LED5	1	LED	MSML-A101-S00J1	Orange	Avago TECHNOLOGIES
R8	1	Resistor	MCR10EZPF10R0	10 Ω ±1%, 1/8 W	ROHM
R2	1	Resistor	MCR10EZPF51R0	51 Ω ±1%, 1/8 W	ROHM
R46	1	Resistor	MCR10EZPF82R0	82 Ω ±1%, 1/8 W	ROHM
R45	1	Resistor	MCR10EZPF91R0	91 Ω ±1%, 1/8 W	ROHM
R19	1	Resistor	MCR10EZPF1000	100 Ω ±1%, 1/8 W	ROHM
R43, R44	2	Resistor	MCR10EZPF2000	200 Ω ±1%, 1/8 W	ROHM
R1, R3	2	Resistor	MCR10EZPF2400	240 Ω ±1%, 1/8 W	ROHM
R5	1	Resistor	MCR10EZPF3300	330 Ω ±1%, 1/8 W	ROHM
R6	1	Resistor	MCR10EZPF3600	360 Ω ±1%, 1/8 W	ROHM
R4, R23-R25, R27-R29	7	Resistor	MCR10EZPF3900	390 Ω ±1%, 1/8 W	ROHM
R7	1	Resistor	MCR10EZPF6200	620 Ω ±1%, 1/8 W	ROHM
R9, R10, R20–R22, R39–R42, R47, R48	11	Resistor	MCR10EZPF1001	1 kΩ ±1%, 1/8 W	ROHM
R11-R18	8	Resistor	MCR10EZPF1002	10 kΩ ±1%, 1/8 W	ROHM
R26	1	Resistor	MCR10EZPF3002	30 kΩ ±1%, 1/8 W	ROHM
R30-R38	9	Resistor	MCR10EZPF1003	100 kΩ ±1%, 1/8 W	ROHM
C21	1	Multilayer Ceramic Capacitor	C2012JB2E102K	1000 pF ±10%, 250 V	TDK
C2, C3, C5, C7, C9–C19, C22, C24	17	Multilayer Ceramic Capacitor	GRM21BB11H104KA01L	0.1 μF ±10%, 50 V	Murata
C4, C6, C8, C20, C25	5	Multilayer Ceramic Capacitor	GRM21BB31A106KE18L	10 μF ±10%, 10 V	Murata
C1, C23	2	Aluminum Electrolytic Capacitor	25PK100MEFC5X11	100 μF ±20%, 25 V	Rubycon
SW1	1	Toggle Switch	A-12AH	ON-ON, Right Angle, 0.4 VA MAX 28 V	NIKKAI
SW5-SW23	19	Toggle Switch	G-12AP	ON-ON, Straight, 0.4 VA MAX 28 V	NIKKAI
SW3, SW4	2	Push Button Switch	B3F-1002	H = 5 mm, 150 g	OMRON
SW2	1	Rotary Code Switch	ERD210RSZ	Shift Type, 0 to 9, BCD, Real Code	Excel Cell Electronic
CN1	1	Connector	HIF3FC-10PA-2.54DSA(71)	10pin, Straight, Polarity Slot 1	HIROSE
CN2-CN5	4	Socket Terminal	FHU-1x42SG	9pin	Useconn Electronics

## Table 16. BILL OF MATERIALS OF LC75843UGA EVALUATION BOARD (LC75843UGAGEVB) (continued)

Designator	Qty.	Description	Part Number	Value	Manufacturer
VDD5V, VOUP, GND1-GND4, OSCI, INH, CE, CL, DI	11	Check Terminal	WT-2-1	D = 3 mm, H = 10 mm	MAC8
S1-S24, S28	25	Check Terminal	LC-2-G-White	White	MAC8
COM1-COM4	4	Check Terminal	LC-2-G-Skyblue	Skyblue	MAC8
JPDT0, JPDT1, JP5V, JP300K, JP38K, JPGND, JPINH, JPCE, JPCL, JPDI, JPUP, JPP1–JPP4, 9Vin, GND	17	Socket Pin	W81102T3825RC	2pin	RS Components
SP5V, SPUP	2	Jump Socket	MJ254-6RD	Red	Useconn Electronics
SPOSCI	1	Jump Socket	MJ254-6BU	Blue	Useconn Electronics
SPINH, SPCE, SPCL, SPDI	4	Jump Socket	MJ254-6WH	White	Useconn Electronics
SPP1-SPP4	4	Jump Socket	MJ254-6GN	Green	Useconn Electronics
	1	Printed Board	LC75843UGAGEVBPCB	200 × 150 mm, t = 1.6 mm, 2-levels, FR-4	ON Semiconductor
	4	Screw		M3	
	4	Nut		M3	
	4	Natural Rubber Foot	BU-692-A	Black, M15 × 7.5 mm	SATO PARTS

CCB is a registered trademark of Semiconductor Components Industries, LLC.

ON Semiconductor and IIII are registered trademarks of Semiconductor Components Industries, LLC (SCILLC). SCILLC which is a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of SCILLC's product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. SCILLC reserves the right to make changes without further notice to any products herein. SCILLC makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does SCILLC assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. "Typical" parameters which may be provided in SCILLC data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. SCILLC does not convey any license under its patent rights nor the rights of others. SCILLC products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the Failure of the SCILLC product could create a situation where personal injury or death may occur. Should Buyer purchase or use SCILLC products for any such unintended or unauthorized application, Buyer shall indemnify and hold SCILLC and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that SCILLC was negligent regarding the design or manufacture of the part. SCILLC is an Equal Opportunity/Aff

#### **PUBLICATION ORDERING INFORMATION**

LITERATURE FULFILLMENT:

Literature Distribution Center for ON Semiconductor P.O. Box 5163, Denver, Colorado 80217 USA Phone: 303–675–2175 or 800–344–3860 Toll Free USA/Canada Fax: 303–675–2176 or 800–344–3867 Toll Free USA/Canada Email: orderlit@onsemi.com N. American Technical Support: 800–282–9855 Toll Free USA/Canada
Europe, Middle East and Africa Technical Support:

Europe, Middle East and Africa Technical Suppor Phone: 421 33 790 2910 Japan Customer Focus Center Phone: 81-3-5817-1050 ON Semiconductor Website: www.onsemi.com

Order Literature: http://www.onsemi.com/orderlit

For additional information, please contact your local Sales Representative